

PUPPITT & LANDAU OWNER'S MANUAL






TABLE OF CONTENTS

PAGE

IMPORTANT SAFETY REGULATIONS.....	1-2	SERVICE.....	40-41
WELCOME TO RV'ING BY GEORGIE BOY.....	3	REPORTING SAFETY DEFECTS.....	41
INTRODUCTION.....	4-5		
LOADING AND WEIGHT DETERMINATION..	6-7	IMPORTANT SAFETY REGULATIONS	
		LP GAS AND APPLIANCES.....	1-2
VEHICLE WEIGHT DISTRIBUTION.....	8	WELCOME TO RV'ING BY GEORGIE BOY.....	3
VEHICLE WEIGHING PROCEDURES.....	8-9	INTRODUCTION	
PLANNING AND PREPARATION.....	10-11	TAKING DELIVERY.....	4
DRIVING AND PARKING.....	11-18	DEALER RESPONSIBILITIES.....	4
MAINTENANCE OF POWER SYSTEMS....	18-19	OWNER RESPONSIBILITIES.....	4
ELECTRICAL SYSTEMS.....	19-23	CONSTRUCTION STANDARDS.....	4-5
SLIDE OUT ROOM INSTRUCTIONS.....	24-26	OBTAINING SERVICE.....	5
LIQUID PETROLEUM GAS SYSTEM.....	26-30	PREPARE FOR THE APPOINTMENT.....	5
		BE REASONABLE WITH YOUR REQUESTS....	5
PLUMBING SYSTEMS.....	30-34	NO OFFENSE.....	5
COMPONENT MONITORING SYSTEM.....	34	INSPECT THE WORK PROPERLY.....	5
EQUIPMENT AND FURNISHINGS.....	35	IMPORTANT DOCUMENTS.....	5
CARE AND MAINTENANCE.....	35-37	LICENSES.....	5
EXTERIOR CARE.....	37-38	INSURANCE.....	5
EXTENDED STORAGE.....	38-39	LOADING AND WEIGHT DETERMINATION	
EMERGENCIES.....	39-40	WEIGHT DEFINITIONS.....	7
		FOUR TIRE WEIGHTS.....	7
		WEIGHT SHEET EXAMPLE.....	7
		VEHICLE WEIGHT DISTRIBUTION.....	8
		VEHICLE WEIGHING PROCEDURES	
		WHERE TO WEIGH YOUR RV.....	8
		HOW TO WEIGH YOUR RV.....	8-9
		PLANNING AND PREPARATION.....	10
		DRIVING AND PARKING	
		SAFETY BELTS.....	11-12
		CHILD RESTRAINT PRECATIONS.....	12
		ELECTRICAL.....	12
		DRIVER'S COMPARTMENT.....	12



TABLE OF CONTENTS (PG. 2)

FOUR CORNER WEIGHING.....	12-13	RETRACTING SLIDEOUT ROOM.....	24
TOWING.....	13-14	MANUAL OPERATION OF SLIDOUT ROOMS	
FUEL (LIQUID, PETROLEUM, GAS).....	15	(PURSUIT & LANDAU ONLY).....	24
LEVELING.....	16	LIVING ROOM (FRONT) SLIDOUT ROOM	
ENGINE COOLING SYSTEM.....	16	MANUAL OPERATION.....	24
WINDSHIELD DEFROST CONTROL.....	16	BEDROOM SLIDEOUT ROOM OPERATION...	25
12 VOLT FUSE REPLACEMENT.....	16	BEDROOM SLIDEOUT ROOMS (WARDROBE	
CHANGING A TIRE.....	17	SLIDES ONLY) MANUAL OPERATION.....	25-26
SPARE TIRE WINCH ASSEMBLY MODELS...	17		
TIRE CHAINS.....	17	LIQUID PETROLEUM GAS SYSTEM	
RECOVERY TOWING ON THE ROAD.....	18	TYPICAL LIQUID PETROLEUM GAS TANK....	26
TO PREPARE YOUR MOTORHOME FOR		LP GAS TANK.....	26-27
TOWING.....	18	FILLING THE LP GAS TANK.....	27
EMERGENCY TOWING.....	18	LP GAS SYSTEM LEAK CHECKS.....	27
		USING YOUR LP GAS SYSTEM AT LOW	
MAINTENANCE OF POWER SYSTEMS		TEMPERATURES.....	27-28
MOTORHOME CHASSIS OPERATOR'S		LP GAS LEAK DETECTOR.....	28
MANUAL.....	18	LP GAS APPLIANCES.....	28
RADIATOR SERVICE.....	18	IF YOU SMELL GAS.....	28
ENGINE SERVICE.....	18	RANGE TOP AND OVEN.....	28-29
GENERATOR POWER PLANT SYSTEM		FORCED AIR FURNACE.....	29
SERVICE.....	19	WATER HEATER.....	29
		LP GAS/ELECTRIC REFRIGERATOR.....	30
ELECTRICAL SYSTEMS		REFRIGERATOR WITH ACCESS VENT	
TYPICAL ELECTRICAL DISTRIBUTION.....	19	REMOVED.....	30
BATTERY SERVICE.....	19		
120 VOLT SYSTEM POWER SUPPLY CORD.	19	PLUMBING SYSTEMS	
GENERATOR.....	20	FRESH WATER.....	30
STARTING THE GENERATOR.....	20	EXTERNAL WATER SUPPLY.....	30-31
GENERATOR FUEL.....	21	FILLING FRESH WATER SUPPLY.....	31
REFRIGERATOR/FREEZER.....	21	TROUBLESHOOTING THE WATER SYSTEM.	31
ROOF AIR CONDITIONER.....	21	WINTERIZING THE WATER SYSTEM.....	32
DUCTED ROOF AIR CONDITIONER.....	22	JUDICIOUS USE OF FRESH WATER.....	32
MAINTENANCE.....	22	SANITIZING WATER TANK.....	32-33
12 VOLT BATTERIES.....	22	TYPICAL HOLDING TANK COMPARTMENT....	32
12 VOLT FUSES.....	22	WASTE WATER SYSTEM.....	33-34
LIGHTING.....	22	DO'S & DON'TS WASTE TANKS.....	34
BATTERY DISCONNECT PANEL.....	23	BLACK TANK RINSE SYSTEM.....	34
EMERGENCY START SWITCH.....	23		
MAP LIGHT OPERATION.....	23	COMPONENT MONITORING SYSTEM	
		COMPONENT MONITORING PANEL.....	34
SLIDEOUT ROOM INSTRUCTIONS			
EXTENDING SLIDEOUT ROOM.....	24		



TABLE OF CONTENTS

EQUIPMENT AND FURNISHINGS

COCKPIT PEDESTAL SEATS.....	35
DINETTE BED.....	35
STORAGE.....	35

CARE AND MAINTENANCE

INTERIOR CLEANING WALL PANELING.....	35
DRAPERIES, CUSHIONS, BEDSPREADS AND UPHOLSTERY FABRICS.....	35
FIXTURES.....	36
WINDOWS.....	36
LOCKSETS AND LATCHES.....	36
CARPETING.....	36
PLUMBING.....	36
CONDENSATION & VENTILATION.....	36

EXTERIOR CARE

EXTERIOR GLASS AND TRIM.....	37
MAINTENANCE AND FIBERGLASS CO.....	37
ROOF.....	37-38
SEALANT CHECK SEAMS AND MOLDINGS..	38
REPAIRS.....	38

EXTENDED STORAGE

WATER SYSTEM.....	38
KITCHEN APPLIANCES.....	38
FURNACE FAN AND THERMOSTAT.....	39
ELECTRIC STEP.....	39
PLUMBING COMPARTMENT LIGHT.....	39
BATTERY DISCONNECT PANEL.....	39

EMERGENCIES

SMOKE DETECTOR.....	39
FIRE EXTINGUISHER.....	39
OPERATING YOUR DETECTOR.....	39
ESCAPE ROUTES.....	39-40

SERVICE

OPTIMUM SERVICE SATISFACTION.....	40
IF YOU ARE NOT SATISFIED.....	41

REPORTING SAFETY DEFECTS.....	41
-------------------------------	----



PURSUIT & LANDAU OWNER'S MANUAL



IMPORTANT SAFETY REGULATIONS PLEASE READ CAREFULLY

LP GAS SYSTEMS AND APPLIANCES

Georgie Boy Manufacturing, LLC is required to furnish the following consumer information as provided by the National Fire Prevention Association and the American National Standards Institute. The information and warnings found here may also be found in other sections of this Owner's Manual. Please see sections titled "Liquid Petroleum Gas System" and "Appliances" for other safety and operating information.

WARNING!!!

THE LIGHTING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.

CAUTION!!!

THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

WARNING!!!

LP gas containers shall not be placed or stored inside the vehicle. LP gas containers are equipped with safety devices which relieve excessive pressure by discharging gas to the atmosphere.

WARNING!!!

It is not safe to use cooking appliances for comfort heating. Cooking appliances need fresh air for safe operation. Before operation:

1. Open overhead vent or turn on exhaust fan.
2. Open window

A warning label has been located in the cooking area to remind you to provide an adequate supply of fresh air for combustion. Unlike homes, the amount of oxygen supply is limited due to the size of the recreational vehicle, and proper ventilation when using the cooking appliances(s) will avoid dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating as the danger of asphyxiation is greater when the appliance is used for long periods of time.

WARNING!!!

Portable fuel-burning equipment, including wood and charcoal grills and stoves, must not be used inside the recreational vehicle. The use of this equipment inside the recreational vehicle may cause fires or asphyxiation.



⚡ WARNING!!!

Do not bring or store LP gas containers, gasoline, or other flammable liquids inside the vehicle because a fire or explosion may result.

⚡ WARNING!!!

Do not bring or store LP gas containers, gasoline, or other flammable liquids inside the vehicle because a fire or explosion may result.

A warning label has been located near the LP gas container. This label reads:

⚡ DO NOT FILL CONTAINER(S) TO MORE THAN 80 % OF CAPACITY.

Overfilling the LP gas container can result in uncontrolled gas flow which can cause fire or explosion. A properly filled container will contain approximately 80 percent of its volume as liquid LP gas.

The following label has been placed in the vehicle near the range area:

IF YOU SMELL GAS:

1. Extinguish any open flames, pilot lights and all smoking materials.
2. Do not touch electrical switches.
3. Shut off the gas supply at the tank valve(s) or gas supply connection.
4. Open doors and other ventilating openings.
5. Leave the area until odor clears.
6. Have the gas system checked and leakage source corrected before using again.

LP gas regulators must always be installed with the diaphragm vent facing downward. Regulators that are not in compartments have been equipped with a protective cover. Make sure that regulator vent faces downward and the cover is kept in place to minimize vent blockage which could result in excessive gas pressure causing fire or explosion.

" This vehicle may be equipped with one or more devices that record specific vehicle data. The type and amount of data recorded will vary depending on how the vehicle is equipped. Please refer to the owner's manual for your chassis for further information."



WELCOME TO "RV'ING" BY GEORGIE BOY

Your Travel Trailer was manufactured by Georgie Boy Manufacturing, LLC.

Welcome to our growing family of satisfied RV owners. Hours of relaxation, adventure and enjoyment await you and your family in your new RV. It is our intention that with the help of this manual that you will be able to enjoy your purchase for many years.

This owner's manual has been prepared to help you and your family use and enjoy your new RV by providing basic instructions for the operation and maintenance of the appliances, accessories and RV systems. Please read it carefully and follow the instructions. Also read and follow the instructions contained in the appliance and accessory manufacturer's booklets provided with your RV.

If you have any questions regarding the operation, maintenance or service of your new RV, please contact your dealer or Georgie Boy Service Operations so we can assist you. Your complete satisfaction is of the utmost importance to us.

Operation and maintenance instructions regarding appliances in this manual were obtained from the manufacturer's booklets and are used with the permission of those various manufacturers. Georgie Boy reserves the right to present edited portions of these materials. However, for a full understanding of these appliances, we suggest that you review those materials separately.

We offer a variety of recreational vehicles with varied standard and optional equipment; therefore, certain descriptions in this manual may not apply to your RV. Ask your authorized dealer, or see the current brochure for information on the availability of standard and optional equipment.

Thank you for buying our product. The entire Georgie Boy family wishes you many safe and enjoyable journeys in your new RV.

Sincerely,

The Georgie Boy Service Operations Team

Note: Georgie Boy works year round to improve its products. As a result, all specifications and equipment are subject to change with out notice.

All information contained in this Owner's Manual is believed to be accurate at the time of publication; however, during the model year it may become necessary to make revisions and Georgie Boy reserves the right to make all such changes without notice.



INTRODUCTION

Congratulations on the purchase of your new recreational vehicle. We sincerely thank you for choosing our product. You'll find many useful tips for the basic operation and maintenance of your vehicle's systems and appliances in this owner's manual.

If you are a first-time RV'er, we want you to learn to operate your vehicle correctly and be able to use components, appliances and any optional equipment in the most efficient manner and with confidence. If you are a veteran RV'er, you know that things change and a quick review of this manual will bring you up to date on what's new.

We would recommend you take a short trip first. The experience you will gain from this will help make your future RV'ing more enjoyable. While there are many accessories available to complement the standard and optional equipment you've chosen for your Travel Trailer, you may wish to use your vehicle several times before you invest in these accessories. What may be a necessity for one RV'er could prove to be of no value to you. Remember, your dealer is always ready to help and advise you.

Note: Due to individual taste and optional floor plans offered, your vehicle may not have all of the components illustrated or described in this manual. Ask your dealer for details concerning the specifics of your Travel Trailer.

TAKING DELIVERY

Your recreational vehicle has been inspected by our factory personnel throughout the manufacturing process. Our final factory check by quality control inspectors is not the last one. Your dealer performs additional predelivery inspections and systems checks. They will also help you understand the Warranty and complete any necessary forms.

DEALER RESPONSIBILITIES:

1. Orienting the customer to the recreational vehicle's systems and components as well as their operation.
2. Insuring the customer receives a complete Owner's Packet with warranty cards and registrations for the recreational vehicle and for separately warranted products, including operation and maintenance instructions.
3. Review Limited Warranty provisions with the customer, stressing the coverage. Assist the customer in completing these forms if needed and request that the customer read all warranty information as soon as possible explaining any provisions not clearly understood.
4. Instruct the customer how to obtain local or out-of-town service for the recreational vehicle and its separately warranted components.

OWNER RESPONSIBILITIES

As a new recreational vehicle owner, you have the responsibility for regular and proper maintenance. This will help you avoid conditions arising from neglect and that are not covered by your Georgie Boy limited warranty. Maintenance services should be performed in accordance with this Owner's Manual and any other applicable manuals. As the owner, it is your responsibility and obligation to return the recreational vehicle to an authorized dealer for repairs and service.

Since the Authorized Dealer from whom you purchased your new recreational vehicle is responsible for its proper servicing before delivery and has an interest in your continued satisfaction, we recommend that inspection, warranty and maintenance services be performed by them.

CONSTRUCTION STANDARDS

It is our intention and utmost goal to provide a safe and quality built motor home to each and every purchaser. To this end, we have strived to build all our units to the most stringent requirements of all Codes and Standards which cover the production of motor homes. In some cases, we have chosen the standard which meets the legal requirements for the State in which it is delivered. We are confident the purchasers of our products have received motor homes that will meet their recreational requirements with the optimum safety, quality and design.



Note: Any alterations or additions, or results of those alterations or additions to the finished product as shipped by Georgie Boy, are the responsibility of the party making the alterations or additions, and not Georgie Boy Mfg.LLC.

Certifications of construction standards by the chassis manufacturer are the responsibility of the manufacturer and are not assumed by Georgie Boy Mfg. LLC. Your motor home has been designed to conform with or exceed the American National Standards Institute Code A119.2 and/or State and Federal motor vehicle standards as applicable. These Standards establish the plumbing, heating, electrical and other requirements for quality and safety. Compliance with this Standard is indicated by the seal installed just outside the passenger entrance door. This seal is the outward sign of internal quality. Should you have any questions regarding operation, maintenance or service, please contact your dealer immediately so he can be of assistance.

OBTAINING SERVICE

Give thought to the appointment time....Monday and Friday are the busiest days at most dealerships. Therefore, try to make a mid week appointment whenever possible.

PREPARE FOR THE APPOINTMENT

Try to be as specific as possible with your concerns. You should show the dealer representative what your concerns are. All work may not be covered by warranty; discuss additional charges with the dealer representative. Keep a maintenance log of your vehicle's service history. This can often provide a clue to the current concern.

PREPARE A LIST

Prepare a written list of concerns or specific work you require to be done. It is important that the dealer representative understands what your concerns are.

BE REASONABLE WITH YOUR REQUESTS

Appointments are made according to the type of repair scheduled, and the amount of time needed to complete the repair. If you add items after the appointment is set, discuss the situation with your dealer representative and list your items in order of priority. Expect to make a second appointment for work not completed or for parts that may need to be ordered.

NO OFFENSE

Insurance requirements forbid the admission of customers to a service repair area.

INSPECT THE WORK PROPERLY

Inspect the completed repairs when you pick up your vehicle. Notify your dealer representative of any dissatisfaction.

IMPORTANT DOCUMENTS

Always carry your vehicle registration and insurance policy cards. If you lend your vehicle, it is best to give the borrower a notarized letter authorizing them to be in possession of the vehicle.

LICENSES

Vehicle licensing laws vary from state-to-state. Check with your state license bureau of the nearest licensing branch office for the requirements in your state.

INSURANCE

Consult your insurance agent about personal liability, property damage, collision, theft and personal property coverage for your new recreational vehicle. Always carry your insurance policy and/or card with you when you travel. Obtain current road maps and tourist information for each state you'll visit or drive through.

"This vehicle may be equipped with one or more devices that record specific vehicle data. The type and amount of data recorded will vary depending on how the vehicle is equipped. Please refer to the owner's manual for your chassis for further information."



LOADING AND WEIGHT DETERMINATIONS

Distribute your cargo evenly from side to side and from front to back. Load-leveling hitches are available; however you should rely on some experienced recommendations to determine if your trailer and tow vehicle are suitable for such a load leveling hitch. Heavier items should be stored in a central location, on or near the floor. They should be secured so they cannot slide during a sudden stop. Loose cargo can cause damage and alter your load balance. Lighter items can be stored in overhead cabinets or other areas. Experienced campers usually use plastic plates, cups, bowls, etc. as they are lighter in weight and do not break.

It is advisable to weigh your trailer before you leave on a trip. You can weigh your trailer at a grain elevator, sand or gravel pit or a government weigh station. Weigh your trailer loaded as you intend to use it. There may be a small fee for weighing your trailer, but it is an investment in safe traveling and peace of mind. Check the Gross Axle Weight Rating (GAWR) and the Gross Vehicle Weight Rating (GVWR) found on the Federal Sticker affixed to each trailer. The Federal Sticker lists the Trailer Serial Number, front and rear GAWR and the GVWR. Your tow vehicle has a similar sticker. The ratings listed on each sticker are for the specific wheel and tire size listed.

We suggest that you record the information off of the Federal Sticker in the space provide below to ensure that you always have the information close at hand.

GVWR _____	GAWR FRONT _____
GAWR REAR _____	With _____ Tires
RIMS _____	at _____ PSI COLD

MFD BY: _____
DATE OF MFR. _____
INC.VEH.MFD.BY: _____
DATE OF INC. MFG. _____
G.V.W.R. _____
G.A.W.R.FRONT _____ WITH _____
TIRES _____ RIMS AT _____
PSI COLD SINGLE
REAR _____ WITH _____
TIRES, _____ RIMS AT _____
PSI COLD _____
THIS VEHICLE CONFORMS TO ALL APPLICABLE FEDERAL MOTOR VEHICLE SAFETY STANDARDS IN EFFECT ON _____
V.I.N. _____
TYPE: _____

Note: EXCEEDING THE GVW AND GAW RATINGS FOR YOUR TRAILER COULD RESULT IN SERIOUS DAMAGE TO THE SUSPENSION, FRAME OR OTHER COMPONENTS OF YOUR TRAILER AND VOID THE WARRANTY ON THOSE PARTS. USE OF HEAVIER SUSPENSION COMPONENTS (SPRINGS, SHOCKS, AXLES) OR HEAVIER PLY TIRES DOES NOT INCREASE THE WEIGHT RATINGS PRINTED ON ANY VEHICLE'S CERTIFICATION PLATE.

The GAWR of each axle is determined by the axle system components with the lowest weight carrying capacity. To avoid overloading your vehicle, check the GVWR and the GAWR.

NOTES:



Weight Definitions

- GVWR—(Gross Vehicle Weight Rating) is the maximum permissible weight of the vehicle. The GVWR is equal to or greater than the sum of the Unloaded Vehicle Weight plus the Net Carrying Capacity.
- GAWR—(Gross Axle Weight Rating) is the allowable weight, including cargo, which can be safely supported by each axle.
- UVW—(Unloaded Vehicle Weight) is the weight of the trailer with no fluids, cargo optional equipment or accessories.
- HITCH WEIGHT—the weight at the hitch of this model with the unit sitting level. This weight includes typical options, but does not include the weights of full fresh water tank, holding tanks and LP bottles.
- CCC—(Cargo Carrying Capacity) is equal to the GVWR minus each of the following: UVW, the weight of the water in a full water tank and water heater and full LP gas.

Four Tire Weights

When possible, it is desirable to obtain the individual weights at each wheel. This requires using scales which are capable of measuring each tire weight individually (DOT Scales, for example). A tire weight should not exceed 1/2 of the respective GAWR, or the maximum load rating listed on the tire, whichever is less. If any of the weights exceed these weights, relocate or redistribute a portion of the cargo until the weights are within the proper limits.



MOTORHOME WEIGHT INFORMATION

Georgie Boy motorhomes are designed to allow for a wide variety of uses from extended trips with two people to short trips with multiple people. Accordingly, each unit allows ample room for sleeping, seating, fluids and cargo. While the customer is the beneficiary of this design, the customer also bears the responsibility to select the proper combination of passengers, cargo load and towed vehicle without exceeding the chassis weight capabilities. Seat belts are required to be worn in most states, and should always be used for passenger safety. Seat belts have been provided at most seating locations to allow convenience in selecting which seat to occupy. However, it is not intended that all seating positions equipped with seat belts may be occupied while the vehicle is in motion, without regard to other weight factors.

DO NOT EXCEED THE CARGO CARRYING CAPACITY OF THIS VEHICLE

PRODUCT _____ YEAR _____ MODEL _____ SER # _____

LBS. GVWR (GROSS VEHICLE WEIGHT RATING) is the maximum permissible weight of this fully loaded motorhome.

LBS. UVW (UNLOADED VEHICLE WEIGHT) is the weight of this motorhome as manufactured at the factory with full fuel, engine oil, and coolants. The UVW does not include cargo, fresh water, propane, occupants, or dealer installed accessories.

LBS. SCWR (SLEEPING CAPACITY WEIGHT RATING) is the manufacturer's designated number of sleeping positions multiplied by 154 pounds (70 kilograms).

LBS. CCC (CARGO CARRYING CAPACITY) is equal to GVWR minus each of the following: UVW, full fresh (potable) water weight (including water heater), full propane weight and SCWR

LBS. GCWR (GROSS COMBINATION WEIGHT RATING) means the maximum allowable loaded weight of this motorhome and any towed trailer or towed vehicle. *Actual GCWR of this vehicle may be limited by the sum of the GVWR and the installed hitch rated capacity. See hitch rating label for weight limitations.*

CARGO CARRYING CAPACITY (CCC) COMPUTATION:

	LBS	(KG)
GVWR.....	_____	_____
Minus UVW.....	_____	_____
Minus fresh water weight _____ of gallons @ 8.3 lb/gal (3.8kg/gal).....	_____	_____
Minus propane weight of _____ gallons @ 4.2 lb/gal (1.9kg/gal).....	_____	_____
Minus SCWR of _____ persons @ 154lb/person (70 kg/person).....	_____	_____
CCC for this motorhome*.....	_____	_____

*Dealer installed equipment and towed vehicle tongue weight will reduce CCC

ALL WEIGHTS ARE APPROXIMATE and provided to assist the operator in the proper loading of this vehicle.

WARNING: CONSULT OWNER MANUAL(S) FOR SPECIFIC WEIGHING INSTRUCTIONS AND TOWING GUIDELINES INCLUDING AUXILIARY BRAKE REQUIREMENTS FOR ANY TOWED TRAILER OR TOWED VEHICLE.



VEHICLE WEIGHT DISTRIBUTION

NOTES:

A correctly loaded vehicle is necessary for safe operation. Distribute your cargo evenly from side-to-side and front-to-back. Heavier items should be stored as centrally as possible, on or near the floor. They should be secured so that they cannot slide during a sudden stop and cause damage (loose cargo can alter the balance you had when you started). Lighter items can be stored in overhead cabinets or other areas. Remember to leave space and weight allowance for souvenirs and other items you may purchase during your travels. A properly loaded unit can help conserve fuel and can prevent excessive wear on your vehicle's automotive system.

All Georgie Boy® motor homes are designed to ensure that the number of passengers allowed while the vehicle is in motion will always at least equal the stated sleeping capacity. Though extra seat belts may be provided, for your safety and the proper operation of your vehicle, limit your passengers to the number allowed by the Net Carrying Capacity of your vehicle.

Note: Each motor home must have as many "designated seating positions" (DSPs) as it has Stated Sleeping Positions. A DSP is one equipped with a seat belt that complies with all pertinent FMVSS requirements. The following guidelines should be used for determining your stated sleeping positions:

SLEEPING SURFACE

SLEEPING CAPACITY

Double or Queen Bed	2
Twin Bed, each	1
Jack-Knife Sofa	1
Hide-A-Bed Sofa	2
Convertible Dinette	1

Make sure that all cargo is properly distributed side-to-side and front-to-rear prior to weighing. Also note the level of fuel, water and LP at the time of weighing.

Note: Each trunk compartment maximum capacity is 200 lbs.

Periodically weigh the motor home at a public scale to determine axle loads. The following procedure is suggested, although any method recommended by the scale operator which correctly determines weight values is acceptable. During all measurements, it is important to keep the vehicle as level as possible.

VEHICLE WEIGHING PROCEDURES

Where to Weigh Your RV

To weigh your RV correctly, measure the fully loaded vehicle, axle by axle and wheel position by wheel position. You can find several certified public or commercial scales at moving and storage lots, farm suppliers with grain elevators, gravel pits, recycling companies, and large commercial truck stops. (Also look in the telephone book under "weighers" or "weighing."). Allow adequate time, since the entire weighing process can take up to 30 minutes. There may be a small fee for each weight taken, but the expense is a worthwhile investment toward the safe and economical operation of your vehicle.

How to Weigh Your RV

Your RV must be weighed fully loaded as you would normally use it, that is, with passengers, food, clothing, fuel, water, propane, supplies, etc. Any towed vehicle (car/pickup, boat, or trailer) or item loaded on brackets on the back of the RV should also be included in the weighing.



NOTES:

1. The following steps are suggested when using a long platform scale:
 - a. Pull onto the scale so that only the front axle is on the platform (with the end of the scale midway between the front and rear axles), and record the scaled weight.
 - b. Pull forward until the full unit is on the scale and record the weight.
 - c. Pull forward so that only the rear axle is on the scale, and record the scaled weight.
 - d. If a boat, trailer or other vehicle is being towed, it should be weighed and combined with the towing vehicle's GVW to ensure the total weight does not exceed the GCWR.

Note: Even though the weight of the total axle may be within the axle's rating, it may be overloaded on one side. This causes one wheel position to be overloaded. Therefore, side-to-side weighing should also be done.

To obtain the individual wheel position weights, repeat this process with only one side of the RV on the scale. To determine individual wheel position weights, it is necessary to repeat the previous three steps (1a, 1b, and 1c), but this time, use only one side of the scale. To calculate the opposite side of the vehicle wheel position weight, subtract this side's weights from the weights recorded in steps 1a, 1b, and 1c.

Your RV must remain as level as possible on the scale (even though an axle or side is not physically on the scale). Obviously, to obtain the side-to-side weights, there must be enough space on either side of the scale to accommodate the RV being partially off the scale.

If there is a difference in the weights on one side of the vehicle as compared to weights on the other side, components (tires, wheels, brakes, springs, etc.) on the heavier side could be overloaded, even though the total axle load is within the GAWR. It is important to redistribute the load to avoid component failure, as well as to improve the handling characteristics of the vehicle.

With these actual weights, it is now possible to compare them against the GAWR, GVWR and tire capacities. These weights are also what should be used to help determine the proper air pressure for the tires.

You can ensure the tires on your RV are not overloaded by maintaining the proper inflation pressure and by never exceeding your vehicle's Gross Axle Weight Ratings (GAWR) or the Gross Vehicle Weight Rating (GVWR). (Remember: this information can be found on the certification label or in your chassis owner's manual). The vehicle load must be distributed so that no individual axle, tire or dual assembly is overloaded.

! Caution: Individual wheel position weights must not exceed the maximum tire load capacity. Maximum tire load capacity can only be achieved utilizing the maximum allowable pressure (psi) as listed on the sidewall of the tire.

Note: The above information is provided by the Tire Industry Safety Council, Rubber Manufacturer's Association. Used with permission.

2. For improved accuracy, Georgie Boy recommends using a segmented 4-pad scale (when possible) to determine individual wheel weights. The corner weights should not exceed 1/2 of the respective Gross Axle Weight Rating (GAWR) or the maximum load rating for the tire (or set of dual tires at the rear), whichever is less. The maximum load rating for the tire can be found embossed on the tire's sidewall. If any of the corner weights exceed 1/2 of the listed GAWR or tire ratings, relocate the passengers and redistribute or remove a portion of the cargo until the weight is within the proper limits for all four corners of the vehicle.

Note: Additional cargo carrying capacity can be obtained by reducing the amount of fresh water carried while driving.



PLANNING AND PREPARATION

NOTES:

Plan your trip and organize all preparations before you leave. Proper preparation can be the key to getting the most enjoyment from your motor home. The following suggestions are provided only as a guide. Review them carefully before starting on your first trip. Refer to the list when on trips and make note of items forgotten to make subsequent trips even more enjoyable.

1. Plan your route carefully. Consult maps and guidebooks (available at most bookstores and newsstands) to become aware beforehand of any road conditions, campsite availability and other circumstances.

2. Be sure your batteries are fully charged and that all equipment is serviced and ready for travel.

3. Check all fluids including:

- Motor home engine crankcase oil
- Transmission fluid
- Power steering fluid
- Radiator recovery system reservoir level
- Master cylinder brake fluid
- Windshield washer reservoir level
- Hydraulic leveling jack reservoir, if so equipped

4. Inspect wheel lugs for tightness. Examine all tires for road damage and wear, then inflate to the proper pressures as recommended in the Chassis Operator's Manual.

Note: Tire pressures listed in your Chassis Operator's Manual are for cold tires and normal driving and load conditions and also for unusual operating or load conditions. Use the appropriate pressure for your driving conditions.

5. Check oil level in the generator power plant (if installed.) Refer to instructions and maintenance manual provided by the generator manufacturer for other pre-use service requirements applicable to this equipment. Check that extra oil and other service supplies are provided for the generator power plant if the motor home is to be used for extended periods.

6. Make sure that a serviceable fire extinguisher is secured in the mounting bracket.

7. Verify that all items you plan to take are on board.

8. Check that accessories, such as a plastic sewer hose with the necessary fittings and a water supply line, such as an approved water hose for 125 psi, are on board.

Note: It may be desirable to check ahead with specific campsites where you plan to stop for any special adapters which may be required.

9. Fill fresh water tank, if required. (Refer to the Plumbing Section.)

10. Make sure that drain line cap and holding tank knife valves are closed and secured. Add a holding tank chemical to a few gallons of water in your body waste holding tank. (Refer to Plumbing Section.)


11. Check brake lights, all running lights, turn signals and other vehicle safety items.


12. Put motor home contents in "travel" condition.




NOTES:

13. Secure any loose objects which could shift while traveling.
14. Secure refrigerator contents (place lids on all containers holding liquids, for example) then secure locking latch on refrigerator door.
15. Be sure all cabinets have the contents secured.
16. Fill the fuel tank and be careful not to overfill. Your motor home is designed to use only the fuel recommended in the Chassis Operator's Manual.
17. Be sure all exterior doors are closed and locked.
18. Adjust the driver's seat to the most comfortable position, then adjust the side view mirrors for maximum visibility.

 **WARNING:** ALL PILOT LIGHTS, APPLIANCES AND THEIR IGNITORS (SEE OPERATING INSTRUCTIONS) SHALL BE TURNED OFF DURING REFUELING OF MOTOR FUEL TANKS AND/OR LP-GAS CONTAINERS.

 **WARNING:** PORTABLE FUEL-BURNING EQUIPMENT, INCLUDING WOOD AND CHARCOAL GRILLS AND STOVES, SHALL NOT BE USED INSIDE THE RECREATIONAL VEHICLE. THE USE OF THIS EQUIPMENT INSIDE THE RECREATIONAL VEHICLE MAY CAUSE FIRES OR ASPHYXIATION.

 **WARNING:** DO NOT BRING OR STORE LP-GAS CONTAINERS, GASOLINE OR OTHER FLAMMABLE LIQUIDS INSIDE THE VEHICLE BECAUSE A FIRE OR EXPLOSION MAY RESULT.


DRIVING AND PARKING


For best results, always follow the recommendations in your Chassis Operator's Manual when starting or operating your engine.

Note: Be sure the transmission is in PARK and the parking brake is engaged to keep the motor home from rolling. If the parking brake needs adjustment, see the Chassis Operator's Manual for proper adjustment instructions.

Safety Belts

Safety belts are an important safety feature of your vehicle. For your protection, all belts shall be fastened while your motor home is in motion. The driver's seat and other seats have been equipped with safety belts.

 **WARNING:** SOME SEATS IN SOME MOTOR HOMES MAY NOT HAVE A SAFETY BELT PROVIDED. THESE SEATS ARE NOT INTENDED FOR USE WHILE THE VEHICLE IS IN MOTION. USE THEM FOR ADDITIONAL SEATING ONLY WHEN THE VEHICLE IS STATIONARY. THESE SEATS ARE DESIGNATED BY A TAG NEAR THE SEAT.

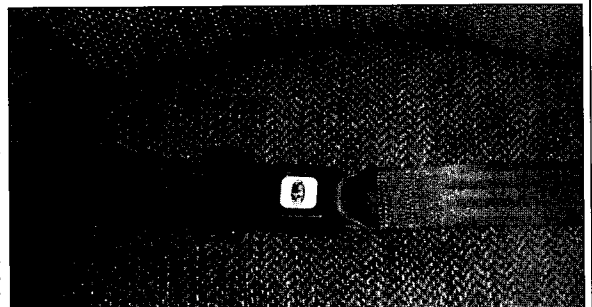



Safety belts on the driver's seat and the front passenger seat are retractable and self-adjusting. Simply make sure the belt is not twisted when coupling. The other safety belts are adjusted in the following manner: To lengthen the belt, tip the buckle at right angles to the belt. Holding the buckle in this position permits the belt to slide through. Pull on the buckle until the desired length is obtained. To fasten the belts, make sure the belts are not twisted, then push the tongue end of one belt into the buckle of the mating belt. Be sure it goes in all the way and that it latches. Tighten by pulling the loose end of the belt while holding the buckle. Adjust the belt as low on the abdomen and as snug as comfort will allow for maximum safety. **NEVER USE A BELT FOR MORE THAN ONE PERSON.**

Important Child Restraint Precautions

You are required by law to use safety restraints for children in the U.S. and Canada. If small children ride in your recreational vehicle (generally children who are four years or younger and who weigh 40 lbs. (18 kg) or less, you must put them in safety seats made especially for children. Check your local and state or provincial laws for specific requirements regarding the safety of children in your vehicle.

Electrical

Test your interior lights, electrical appliances and automotive lights and accessories. Check for spare fuses of every size used in the vehicle.

Driver's Compartment

Take the time before leaving to become familiar with the location and operation of the instrument control panel and other items in the driver's compartment.

Make sure that all automotive accessories and indicator lights are working. Refer to the Chassis Operator's Manual for information regarding components which are installed by the chassis manufacturer. Be comfortable behind the wheel. Adjust the seat and tilt steering wheel. After doing so, make sure the mirrors are aligned for maximum rear visibility. Readjust all of these for different drivers, if necessary.

Four Corner Weighing

It is desirable to obtain the individual weights at each tire, (dual tires on the rear). This requires using scales which are capable of measuring each corner weight individually. The corner weights should not exceed 1/2 of the respective Gross Axle Weight Rating (GAWR) or the maximum load rating for the tire (or dual tires at the rear), **which ever is less.** The maximum load rating for the tire can be found embossed on the tire's sidewall.

Note: If any of the corner weights exceed 1/2 of the listed GAWR or tire ratings, relocate the passengers and redistribute or remove a portion of the cargo until the weight is within the proper limits for all four corners of the vehicle.

NOTES:



NOTES:

Driving the motor home is comparable to driving your family car, once you become accustomed to the feel of the controls and to the reference points from the driver's seat relating to the position of the motor home in traffic. Be cautious when maneuvering to allow for the length and width of the vehicle. Always allow extra room in cornering and when changing lanes. Check the side mirrors often. Learn to use the view of the roadway behind, as seen through the side mirrors, as a reference to help keep a good road / lane position.

Drive with consideration, observe all applicable speed and safety regulations. The best cruising speed for your motor home will vary with road and weather conditions. Remember that the higher speeds may result in a sharp increase in fuel consumption.

Driving on winding or mountain roads is not difficult if done with reasonable care. Observe proper vehicle speeds when ascending or descending hills and always operate in the proper transmission range.

Down shift on hills to avoid overheating or undue engine loads by using the overdrive control as recommended by the Chassis Operator's Manual.

Allow for the extra height of your motor home and avoid areas having low overhead clearance. Check for low-hanging tree branches or other obstructions whenever you drive or park. Avoid low roofs when pulling in for service. This may be particularly important if the motor home is equipped with a roof air conditioner. It is not advisable to drive with the overhead vents open; and you must not drive with the TV antenna in the raised position.

When parking parallel, be sure to allow for poles or obstructions near the curb, as front and rear portions of the motor home swing wider than an automobile. When parking on an incline, it is recommended that the front wheels always be turned into the curb in the direction of roll to aid the parking brake.

! Caution: If you are towing a vehicle or trailer with a Georgie Boy® installed hitch, never exceed the maximum weight rating as listed on the tag on the hitch. For specific towing information and restrictions, see the trailering or towing guidelines published by the Chassis manufacturer. Also, consult your Chassis Owner's Manual.

Towing

If your motorhome is equipped with an optional hitch towing package, don not exceed the Gross Combined Weight Rating (GCWR) as stated in the chassis manufacturer's owner's manual, or the rated capacity of the installed hitch (whichever is less).

An example of the hitch that Pursuit and Landau uses is featured below:



3,500 -5,000 non weight distributing trailer hitch

The rear hitch on your motor home (optional equipment) is provided for the purpose of towing a dingh vehicle or trailer only. The hitch is not to be used a an attachment point for carrying additional cargo.



The trailer weight rating listed on the hitch indicate the maximum weight of the dinghy vehicle or trailer that may be towed behind your motor home. Th tongue weight rating listed on the hitch refers to th maximum amount of trailer weight that can pres downward on the hitch itself.

A properly loaded trailer should have 10-15% of the trailt weight carried by the hitch. Excessive tongue weigh or insufficient tongue weight, will have a negativ effect on the stability and handling of your motorhome.

When towing a dinghy vehicle or trailer, it is important that you adhere to ALL of the applicable weight ratings:

- Do not exceed the GCWR (Gross Combination Weight Rating) for your motor home.
- Do not exceed the GVWR (Gross Vehicle Weight Rating) or either of the GAWR's (Gross Axle Weight Ratings) for your motor home.
- Do not exceed the weight ratings of the hitch.
- Do not exceed the weight ratings of the trailer.

! Caution: Be sure that all state and federal laws a observed when towing either a dinghy vehicle or trailer.



If a dinghy car is being towed behind a motorhome, be sure to follow all of the restrictions and towing procedures listed in the vehicle owner's manual. If the vehicle is approved for dinghy towing the owner's manual will have specific instructions on how to tow the dinghy vehicle behind a motorhome.

Before towing anything behind your motorhome, be sure to consult all applicable state laws regarding auxiliary brake requirements (many states require brakes on all trailers weighing over 1,500 lbs. Because your motorhome brake system is rated for operation at GVWR (not GCWR) most chassis manufacturers recommend that a separate functional brake system be used for all towed vehicles and trailers weighing more than 1,000 lbs. For safe operation, Georgie Boy® recommends that ALL towed vehicles (trailers, dollies, & towbar-towed autos should be equipped with a separate functional brake system.

NOTES:




NOTES:

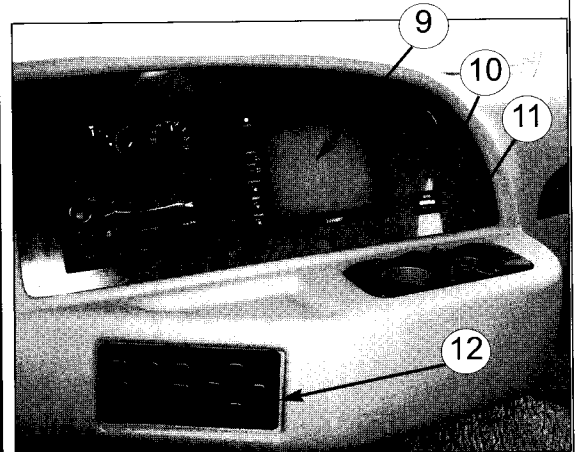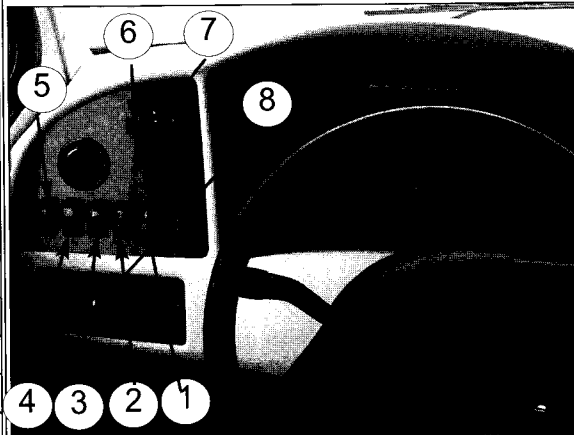

Landau Dash Control Panel

- | | |
|---------------------------|---------------------------------|
| 1. Generator Start Button | 2. Map Lights |
| 3. Fog Lights | 4. Dash Fans |
| 5. Auxiliary Start Button | 6. Mirror Heater Button |
| 7. Mirror Remote | 8. Outside Light Control/Dimmer |
| 9. Outside Camera | 10. Generator Hour Meter |
| 11. 12 Volt Outlet | 12. Leveling Jack Controls |

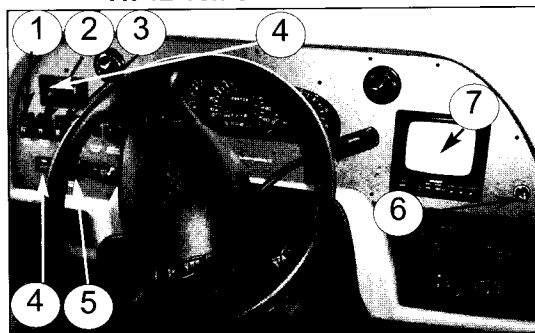

Pursuit Dash Control Panel

1. Map Lights
2. Emergency Start
3. Dash Fans
4. Outside Lights/Dimmer
5. Generator Start Button
6. Cigarette Lighter
7. Outside Camera

Fuel (Liquid Petroleum, Gasoline)

The Pursuit® & Landau® motor homes run on unleaded gasoline. Liquid propane (LP) gas is required to operate the range, oven, water heater and furnace. The refrigerator may be powered by either LP gas or electricity.

A generator is an optional feature. The generator runs on gasoline from the same automotive fuel tank that supplies the engine. Before starting a trip, fill all the fuel tanks with the appropriate fuel.

⚠ Caution: Do not overfill the fuel tank. Overfilling can cause excessive pressure and poor engine performance. Stop filling the tank the first time that the automatic nozzle on the gas hose shuts off.

⚡ WARNING: LP GAS AND GASOLINE ARE EXPLOSIVE. READ AND HEED THE WARNING LABELS ATTACHED TO THE LP GAS TANK AND THE MOTOR HOME NEAR THE FUEL FILLER PIPE.

⚡ WARNING: BEFORE FILLING THE LP GAS TANK OR FUEL TANK, EXTINGUISH ALL PILOT LIGHTS AND OPEN FLAMES ON APPLIANCES AND, EXTINGUISH ALL MATCHES AND SMOKING MATERIALS.

Note: For your convenience many, or all, appliances installed into a Georgie Boy® motorhome are equipped with automatic electronic ignition rather than pilot lights.



Caution: Since supplier components change from time to time, and accessory appliances may have been added to your motor home after manufacturer, do not assume that is the case on all appliances. Learn which appliances have pilot lights and heed the above warning.

Leveling

When parking your motor home, choose a site that is as level as possible. You can level the motor home with the hydraulic leveling jacks. Follow the operating instructions provided by the leveling jack manufacturer.



Caution: Failure to level the motor home can increase the difficulty of walking in your motor home and could lead to injury. Also, the coolant in the refrigerator/ freezer may not flow properly and result in improper operation of that appliance. Also, the plumbing may not drain properly. Units with slide out rooms must be leveled with the leveling jacks before the slide out room is extended.

Engine Cooling System

The engine and cooling system on your vehicle should be operated and serviced as recommended in your Chassis Operator's Manual.

Per the chassis manufacturer's recommendations, check the coolant level, appearance and strength periodically. Also, check hoses regularly for signs of damage or deterioration. Tighten hose clamps as necessary. Replace hoses if they become hard and brittle and show signs of cracking or if they are abnormally soft, spongy or swollen. Also, replace hoses that are flaking or show deterioration of the inner lining. Flaking particles can clog the cooling system, reducing its efficiency.



WARNING: ANTIFREEZE IS FLAMMABLE, DEPENDING ON PRESSURE AND THE PERCENTAGE OF MIXTURE WITH WATER. FOR EXAMPLE, A SLIGHT LEAK IN THE COOLING SYSTEM CAN CAUSE POCKETS OF COOLANT TO COLLECT ON TOP OF THE ENGINE. ENGINE HEAT WILL CAUSE THE WATER IN THE MIXTURE TO EVAPORATE LEAVING A HIGH CONCENTRATION OF FLAMMABLE ANTIFREEZE. AS THE ENGINE GETS HOTTER, DUE TO A LOSS IN COOLANT, THE ANTIFREEZE CAN BURST INTO FLAMES AND CAUSE AN ENGINE FIRE. THIS IS ESPECIALLY TRUE WHEN THE ENGINE IS IDLING BECAUSE OF DECREASED AIR FLOW AROUND THE ENGINE.

If you suspect a leak, replace the coolant with a 50/ 50 mix of antifreeze and water. Then, fix the leak as quickly as possible.



Caution: The Automotive Air Conditioner places an additional load on the vehicle's cooling system. If the engine runs abnormally hot, shut off the air conditioner until the engine cools down.

Note: After a long drive, let the engine idle for a few minutes to gradually reduce the engine temperature.

Windshield Defrost - Comfort Control

During winter months in cold climates, it is important to keep the windshield clear and keep the passenger compartment at comfortable temperatures while on the road. This can be done by use of the proper combination of heater and defroster controls.

12-Volt Fuse Replacement

If part of your vehicle electrical system should fail while on the road, check the replacement circuit fuses located in the automotive circuit. These are automotive-type fuses available at most service stations. Refer to the Electrical section for information on living area 12-volt fuses.

NOTES:



NOTES:

Changing a Tire

For tire changing instructions, see the Chassis Operator's Manual. Your motor home is equipped with premium-grade truck-type tires. Under normal circumstances they should provide thousands of miles of trouble-free service.

Note: Routinely check tires for abnormal wear and if noted, have alignment checked.

Note: Changing a flat tire is best done by a skilled person with the necessary equipment. Your fully-loaded motor home is very heavy. Therefore, each wheel lug nut is torqued to a factory recommended setting, making the lug nuts extremely difficult to remove. In addition, each tire and wheel weighs approximately 90 pounds and is difficult to handle.



WARNING: LOOSENING THE REAR LUG BOLTS WILL RELEASE BOTH OUTSIDE AND INSIDE WHEELS. DO NOT ATTEMPT TO REMOVE LUGS WITHOUT HAVING A JACK IN PROPER POSITION TO ABSORB WEIGHT.

Note: If the flat tire is in one of the inside (rear) dual wheels, the outside wheel on that side will give adequate support and no immediate tire change may be required. Drive at reduced speeds...no more than 25 mph...to avoid overheating the single tire. Obtain assistance at the first service station.

For Models With a Spare Tire Winch Assembly

Finding, Removing, Replacing Spare Tire

1. Spare tire is located behind the rear axle and underneath the motor home (if equipped).
2. Un-thread the master link on the safety chain and un-wire the chain from around the spare tire.
3. Remove nuts, washers and lock washers from threaded rods using a 9/16" wrench.
4. Lower the spare tire using a ratchet and a 3/4" socket.
5. Reinstall flat or repaired tire using the same methods original spare was installed.
6. Place winch bracket inside of rim opening. Using a ratchet and a 3/4" socket raise the tire.
7. Swivel tire as it is raising to line up the threaded rods and place the washer, lock washer and nut in that order back on the rod using 9/16" wrench.
8. Wrap safety chain back through slots in the rim and re-thread the safety chain connecting link.

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DAMAGE TO THE MOTOR HOME, OR PERSONAL INJURY OR EVEN DEATH.



Tire Chains

Caution: Your motor home is not intended to be operated with tire chains.



Recovery Towing on the Road

If your motor home needs to be towed the following guidelines should be used:

1. The vehicle **MUST** be towed only from the front. See Chassis Operator's Manual.
2. Be prepared to give the tow truck operator at least the following information when you call: Length and height of motor home. Chassis Manufacturer gross vehicle Weight rating. Axle weight ratings.

(This information is found on the vehicle certification label located to the left of the drivers seat.)

3. It is recommended that you ask for an UNDERLIFT (wheel lift or frame lift) type towing assembly for safe towing.

To prepare your motor home for towing:

1. Secure any loose or protruding body parts of the disabled vehicle.
2. Secure any heavy loose items in the interior.
3. Turn off all LP gas appliances and LP gas tank valve.
4. Do not allow any person to ride in the towed vehicle.



Emergency Towing

Caution: Do not allow your motor home to be towed without having the tow truck operator read this section and related sections of the Chassis Operator's Manual.

Georgie Boy Manufacturing does not assume responsibility for damage incurred while towing this vehicle.

MAINTENANCE OF POWER SYSTEMS

Motor Home Chassis Operator's Manual

Refer to your Chassis Operator's Manual for information on chassis service recommendations. As a general practice, you should have the coolant, battery and the engine oil levels checked at regular intervals.

Radiator Service

Keep the proper amount of antifreeze/coolant in your radiator. When driving or storing the motor home in freezing temperatures, test the ability of the antifreeze to protect the engine and radiator from freezing. If necessary, drain weak antifreeze and replace with fresh antifreeze to protect well below anticipated temperatures. Refer to the recommendations in the Operators Manual supplied by the chassis manufacturer.

Engine Service

Items serviced from the exterior of the motor home are reached through the front engine access door. This door permits servicing the 12-volt batteries, the radiator and coolant system, the engine oil level and oil filler cap, the power steering reservoir and windshield washer.

The engine compartment cover, located between the driver and passenger seats on gas units, gives access to the air cleaner and allows access for major service. When the engine is being serviced from inside the motor home, protect your carpet and furnishings against oil and dirt. Your service man will be glad to use a protective cloth if you remind him.

Note: Proper engine servicing and record of servicing may be mandatory to ensure chassis warranty protection. Follow the manufacturer's instructions for periodic maintenance checks.

NOTES:



NOTES:

Generator Power Plant System Service

Generator power plant service, recommended by the generator manufacturer, should be performed at an authorized service center (listed in the material provided in your Owner's Information Kit.) Routine or emergency service, such as adding oil, changing filters or replacing spark plugs, could be accomplished at auto service centers, but must be done in accordance with the service instructions specified by the manufacturer.


An hour meter is installed inside the motor home or at the generator. This meter indicates the hours of running time on the generator. Keep track of this information in order to schedule proper generator maintenance.

Circuit breaker(s) on the generator protect the wiring between the generator and the main circuit breaker box. If you have reason to repair the generator, turn the breaker(s) on the generator to the OFF position while making the repair. If you don't, a power surge could damage electrical components inside the motor home.

ELECTRICAL SYSTEMS

Your motor home has two electrical systems. One provides 120-volt (AC) power to operate all 120-volt living area receptacles and appliances. This system is used when power is available from an external power source or from an on-board generator power plant, if one is installed. The standard power rating for this 120-volt service is 30 amps. However, 50-amp service is an available option.

The second system uses an on-board battery or a 12-volt (DC) converter to provide power for all 12-volt lighting, appliances and accessories, as well as normal vehicle needs.

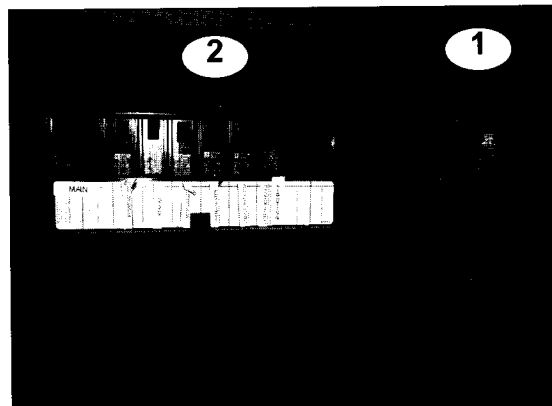

Typical Electrical Distribution Center

1. 12 Volt DC Fuses
2. 120 Volt AC Circuit Breakers

Battery Service

Periodically check your main automotive battery and your auxiliary battery(s) for proper charge, proper cable connections and physical damage. Before starting on a trip, or after extended storage of the motor home, remove the battery cables, clean the terminal posts and cable connections if needed and apply a light coating of grease to prevent corrosion.

120-Volt System Power Supply Cord

Either a 30-amp or a 50-amp power-supply cord is provided in the electrical compartment. When stationary, pull it out and connect it to any adequate power source to activate the power circuits. For optimum performance, use this power cord only with the proper mating connector and only with facilities having the same amperage as your motor home. Such facilities are available in most parks and grounds.



Caution: Using your power cord with power supplies that have less than the rated capacity or using the plug with receptacles for which it was not designed, may damage your appliance and make the warranty inapplicable.



Caution: Make sure the main circuit breaker on the 120-volt circuit breaker panel is in the OFF position while plugging or unplugging the power cord. This protects your major electrical appliances from power surges during plugging and unplugging operations.

Generator

If you have chosen an electrical generator, it is located in a special compartment below the motor home floor. The compartment is sound insulated and constructed to prevent vapors from seeping into the living area.

However, be aware it is possible, with certain wind conditions, fumes from the generator exhaust pipe could enter the motor home through open windows. We recommend generator not be run with windows open! See warning next page.

Starting the Generator

The generator can be started by a switch on the generator itself or through a remote start system. There is a remote switch on the dash instrument panel. The remote switch has an indicator light so that you can tell when the generator is running.

To start the generator, hold the switch in the START position until the unit starts, DO NOT hold the switch in the START position for more than 10 seconds. Release the switch, wait 15 seconds, then repeat. This will help avoid overheating the generator starting motor and may prevent damage to the starting system.

If this system fails to start, the generator manual starting instructions are indicated in the Generator Power Plant Manufacturer's Instructions. To stop the unit, hold switch to STOP position until the engine stops operating. Be sure switch does not stick and returns to neutral position.



WARNING: ALL WINDOWS AND DOORS SHOULD BE CLOSED ANYTIME THE GENERATOR IS RUNNING.


Note: Refer to the Generator Power Plant Manufacturer's Instruction Manual for service information before starting the generator.

Note: Do not start unit with a heavy power load. Always wait at least three minutes after starting generator before turning on (or plugging in) heavy electrical loads. (Example: When optional roof air conditioner is installed.)

NOTES:



NOTES:

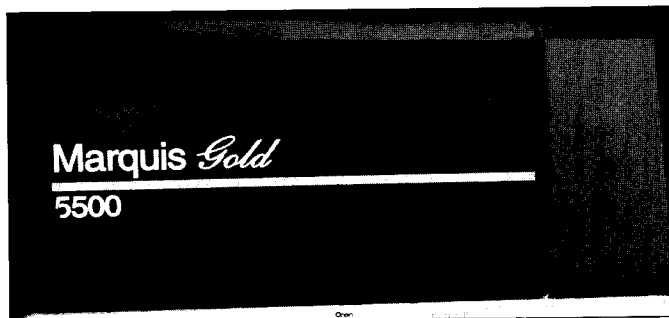

Typical Generator

Generator Fuel


On a gasoline-powered motor home, the generator operates on gasoline taken from the automotive fuel tank. The generator is fed by a special tube which is higher in the tank than the feeder tube to the motorhome engine. This is to prevent immobilizing the motor home by accidentally permitting the generator to run the fuel tank dry.

Over time, fuel will deteriorate to a "varnish" state. Georgie Boy® recommends starting your generator at least once a month to prevent the fuel from deteriorating within the generator's fuel system. If the generator is not going to be operated for a period of 3 months or longer, the winterizing procedure as outlined in your generator's owners manual must be followed.

Refrigerator/Freezer

The refrigerator/freezer is powered by both electricity and LP gas. Consult the refrigerator manual for operating instructions.

When stationary, make sure the motor home is level in order to obtain optimum cooling performance from the refrigerator/freezer.

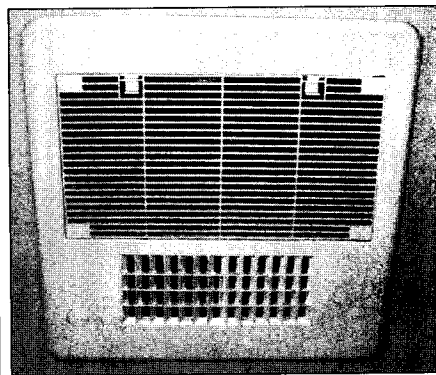

Roof Air Conditioner

Your motor home may be equipped with either one or two optional air conditioners. These are installed on the roof and require 120-volt power from the generator or from an external power source.

With 30-amp service, only one roof air conditioner is available and is operated off either the generator or an external power source. With 50-amp service, two air conditioners may be operated off either the generator or the external power source.



Caution: If the air conditioner is switched off for any reason, wait a few minutes before starting it again to avoid overloading circuit breakers.

When the air conditioner is not being used, always keep controls in deactivated position (Warm Off) to reduce unnecessary circulation of refrigerant.

For best results, carefully follow all instructions provided by the air conditioner manufacturer with regard to operation and maintenance. Keep air filter screen clean and working properly, especially in dusty or dry areas.



Ducted Roof Air Conditioner

Your motor home is equipped with an in-ceiling air conditioner duct system controlled by a remote wall mounted thermostat.

The ceiling registers are designed to be turned clockwise to open and counter clockwise to close. These vents are designed not to close completely. This is to assure the unit won't freeze up the evaporator coil and shut down the condenser, if in the event all registers are shut and the air conditioner is running.

The Polar Aire roof vent system is designed to automatically cool your motor home by use of an adjustable thermostat. Because the thermostat requires a moderate amount of constant 12-volt power, it is recommended that the switch on the wall thermostat be switched 'OFF' when not in use to eliminate battery drain.

Maintenance

Air filter: Periodically remove the return air filter. Wash the filter with soap and warm water, let dry and then reinstall or replace as required.


Note: Never run the air conditioner without the return air filter in place. This may plug the unit evaporator coil with dirt and may substantially affect the performance of the unit.


12-Volt Batteries

When the power supply cord is not connected to a 120-volt external power source or the generator, power for lights and 12-volt appliances is automatically provided from the auxiliary battery.

When 120-volt power is available, a voltage converter allows you to run your 12-volt lights off the 120-volt power source, thus saving a drain on your 12-volt automotive battery.

Extended use of the 12-volt auxiliary batteries will drain the 12 volt system of power. However, if not drained too far, it will be recharged automatically when power is supplied by a 120-volt source. It will also be recharged by the automotive alternator while the engine is running.

 **WARNING:** DO NOT STORE ANYTHING NEAR EITHER THE MAIN ENGINE BATTERY OR THE AUXILIARY BATTERY ALSO, DO NOT PLACE ANY TOOLS ON THE BATTERIES. THESE ITEMS COULD CAUSE AN ELECTRICAL SHORT CIRCUIT, DRAIN POWER FROM THE BATTERY, CAUSE AN EXPLOSION WHICH WOULD SPRAY BATTERY ACID AND/OR START A FIRE.

 **Caution:** Do not store items near the voltage converter in the electrical compartment. The converter could overheat and fail to function properly or become damaged.

12-Volt Fuses

The fuses for the 12-volt electrical system are for easy access. Fuses for the chassis circuit located on a panel under the dash beside the driving column as well as on the exterior side of the firewall.

Note: If a fuse, circuit breaker or fusible link replacement is necessary, replace with one of the same amperage. Most circuit breakers can be reset.

Lighting

All of the exterior and interior lighting in your motor home is 12 volt powered. Most of the interior lighting gets its power from the auxiliary batteries and is ultimately controlled by the battery disconnect switch. The map lights above the front seats; however, the exception. The map lights are powered by chassis battery. The driver side map light is operated by turning the dome light switch located at the rear, the headlight switch on the dash. Be sure that the dash mounted map light switch is turned 'OFF' whenever the light is not being used to prevent battery drain.

NOTES:



NOTES:

Battery Disconnect Panel

Your motor home is equipped with a battery disconnect solenoid for the auxiliary (coach) batteries. The purpose of the battery disconnect system is protect the auxiliary batteries from a slow drain that could occur over an extended period of time. Switching the battery disconnect system to 'STORE' will effectively disconnect the auxiliary batteries from the motor home, and will produce nearly the same result as physically unbolting the battery cables from the batteries themselves (**Note:** the electric entry step is powered by the Auxiliary Batteries, but is not controlled by the battery disconnect system).

The battery disconnect solenoid is controlled by a switch panel near the entry door. The switch panel has an LED light that illuminates whenever power is present at the solenoid itself (for example: Plugging the shore cord into a campground receptacle will cause the light to illuminate, regardless of whether or not the auxiliary batteries are actually in the 'USE' position). Depressing the switch to the upward position will connect the batteries. Depressing the switch to the downward position will disconnect the batteries.

Georgie Boy® recommends that you follow the procedures regarding your battery disconnect system.

- When traveling - turn the switch to 'USE'.
- When camping - turn the switch to 'USE'. Since the LED light on the switch panel illuminates whenever ANY power is present at the solenoid, it will illuminate whenever the shore cord is plugged into any campground receptacle, regardless of whether the solenoid is on 'USE' or not. Therefore, it is possible to have 12-volt power inside the motorhome due to the electrical converter, while the auxiliary batteries are still disconnected. Depressing the switch upward, after the shore cord is attached, will ensure that the battery disconnect solenoid is properly turned to 'USE', allowing the auxiliary batteries to be recharged by the power converter (the chassis battery cannot be recharged by the power converter). In addition, turning the battery disconnect to 'USE', will provide the necessary power to enable that the slide-out rooms will operate properly.
- When storing the motor home - turn the switch to 'STORE'. Whether you are storing the motor home for only a few days, or several months, disconnecting the auxiliary batteries will minimize the amount of battery drain that will occur.

Emergency Start Switch

Your motor home is equipped with an emergency start mechanism. If you have left your headlights on and run down the battery, you can get the engine running by using the emergency start switch. The 12-volt battery that powers the 12-volt circuit in the living quarters is mounted behind the front bumper with your main automotive battery. The emergency start switch on the dash works like a built-in jumper cable that temporarily connects this auxiliary battery to the main automotive battery. Push the button to make the battery connection then turn the ignition key. Release the button when the engine starts.

Map Light Operation

Map lights are controlled by the dash instrument light dimmer switch. This dash switch must be in the dome position and the switch on the map light in the ON position for the light to operate. Some models have a separate dash switch for the passenger side light only.



SLIDE OUT ROOM OPERATING INSTRUCTIONS

NOTES:

Extending Slide Out Room

1. Level vehicle.
2. Place driver's seat in a forward upright position with ignition key turned off.
3. Remove travel bars (if equipped).
4. Storage trunk doors under the slide out room must be closed and latched.
5. Make sure there are no obstacles such as tree limbs, etc. In the way of where the room will extend to.
6. **Press and hold the manual override switch**
7. **While still holding the override switch;** press the switch labeled "OUT", and hold it until the room seals against the inside wall. This room can also be stopped at any time during its travel cycle by releasing the switch.



Retracting Slide Out Room

1. Place driver seat in a forward upright position with ignition key turned to off.
2. Storage trunk doors under the slideout room must be closed and latched.
3. Make sure there are no obstacles such as snow, ice, tree limbs, etc. on the roof of the slideout room.
4. Remove any obstacles that may be in the aisle of the room when retracting.
5. **Press and hold the manual override switch**
6. **While still holding the override switch;** press the switch labeled "IN" and hold it until the room is fully retracted to its travel position.
7. Install travel bars (if equipped).



Manual Operation of Slide Out Rooms

PURSUIT® & LANDAU® MOTORHOMES ONLY

In the event of a system failure with your slide-out rooms, the following procedures can be followed to manually extend or retract the rooms. The manual operation of your slide-out room is a two person job. One person is required to hold the switches, while the other person physically extends or retracts the room.

Living Room Slide-Out Room (front slide-out) manual operation

1. Turn the Manual/Auto rocker switch (located alongside the slide-out switch) to MANUAL mode, and hold down the slide-out switch in the RETRACT direction. This will release the electric friction brake that is designed to hold your room in the proper position. Note: In the event your auxiliary batteries are excessively drained, or a fuse protecting the slide-out system is blown, it will be necessary to remove the electric friction brake from the end of the slide-out room motor. The brake is easily identified by the two small gauge wires that activate it to release. Brake removal is accomplished by unscrewing the 3 screws that connect the brake to the end of the electric slide-out motor.



NOTES:

2. Once the brake is disengaged, insert the crank handle through the 1" hole on the outside of the slide-out room. The end of the handle will slip over a shaft that protrudes from the slide-out mechanism.
3. Turn the handle clockwise to retract the slide-out room. Turn the handle counter-clockwise to extend the slide-out room. Remember to continue to hold down the slide-out switch in the RETRACT direction to keep the brake disengaged while you are manually moving the room.

Bedroom Slide-Out Room (Bed Slide - the bed moves with the slide-out room) manual operation

1. Hold the manual Brake Release rocker switch down (located between the slide-out switches). This will release the electric friction brake that is designed to hold your room in the proper position.

Note: In the event your auxiliary batteries are excessively drained, or a fuse protecting the slide-out system is blown, it will be necessary to remove the electric friction brake from the end of the slide-out room motor. The brake is easily identified by the two small gauge wires that activate it to release. Brake removal is accomplished by unscrewing the 3 screws that connect the brake to the end of the electric slide-out motor.

2. Once the brake is disengaged, the room is ready to be operated manually by turning the small shaft extension (identified by a 5/8" bolt head at the end of the shaft) near the slide-out motor. Access to the shaft extension is gained by removing the baseboard trim on the side of the bed frame.
3. A 5/8" socket can be used to manually operate the slide-out mechanism. Turn the shaft clock-wise to retract the slide-out room. Turn the shaft counter-clockwise to extend the slide-out room. Remember to continue to hold down the manual Brake Release rocker switch to keep the brake disengaged while you are manually moving the room.

Bedroom Slide-Out Rooms (Wardrobe Slides - only the wardrobe moves with the slide-out room) manual operation

1. Hold the manual Brake Release rocker switch down (located between the slide-out switches). This will release the electric friction brake that is designed to hold your room in the proper position.

Note: In the event your auxiliary batteries are excessively drained, or a fuse protecting the slide-out system is blown, it will be necessary to remove the electric friction brake from the end of the slide-out room motor. The brake is easily identified by the two small gauge wires that activate it to release. Brake removal is accomplished by unscrewing the 3 screws that connect the brake to the end of the electric slide-out motor.

2. Once the brake is disengaged, the room is ready to be operated manually by turning the small shaft extension (identified by a large bolt head at the end of the shaft) near the slide-out motor. Access to the slide-out motor is gained through the exterior trunk (beneath the slide-out room) rearward of the rear axle. Unscrewing the upper compartment panel will provide access to the motor assembly.
3. A socket, or wrench, can be used to manually operate the slide-out mechanism. Turn the shaft clockwise to retract the slide-out room. Turn the shaft counter-clockwise to extend the slide-out room. Remember to continue to hold down the manual Brake Release rocker switch to keep the brake disengaged while you are manually moving the room.

Note: Your motor home is equipped with a safety feature that prevents the slide-out rooms from extending while the engine is running. However, your slide-out rooms may still be retracted with the engine running. Therefore, if you experience a situation where your auxiliary batteries are too weak to retract your slide-out rooms back inboard, first try starting the motor home engine so that the chassis battery may provide additional power to the slide-out motors



(battery disconnect must be 'ON'). This procedure will often prevent the need for manual retraction, when the only problem is drained auxiliary batteries.

NOTES:

LIQUID PETROLEUM GAS SYSTEM


⚡ WARNING: LP GAS CONTAINERS SHALL NOT BE PLACED OR STORED INSIDE THE VEHICLE. LP GAS CONTAINERS ARE EQUIPPED WITH SAFETY DEVICES WHICH RELIEVE EXCESSIVE PRESSURE BY DISCHARGING GAS INTO THE ATMOSPHERE.

Liquid Petroleum (LP) gas is the energy source for your range, oven, furnace and water heater. It is also an alternate power source for your LP gas/electric refrigerator. LP gas is a colorless gas, but is stored under pressure as a liquid. It is commercially available under the brand name, Propane. Though odorless in a natural state, LP gas is artificially odorized to smell like garlic for easy detection in the event of a leak. The gas and the tank in which it is stored are safe and convenient, provided sensible precautions are followed.

⚠ Caution: Be aware that travel vibrations may cause the LP gas tank and fittings to loosen, resulting in leaks. Ask your authorized dealer to inspect the tank and fittings at least once a year and after every extended trip. You can also check for leaks by applying Mr. Bubble to all fittings and the welds on the mounting brackets. If you discover a leak, extinguish all nearby flames, tighten the fitting(s), and test with more Mr. Bubble. If the leak persists, close the shut-off valve and seek immediate repair from an authorized dealer.

Typical Liquid Petroleum Gas Tank

1. Electric Lead to Component Monitoring System
2. Fuel Level Indicator and LP Gauge Sender
3. Warning Label
4. Fill Valve
5. Shut Off Valve
6. LP Regulator
7. Gas Line to Appliances
8. LP Gas Tank

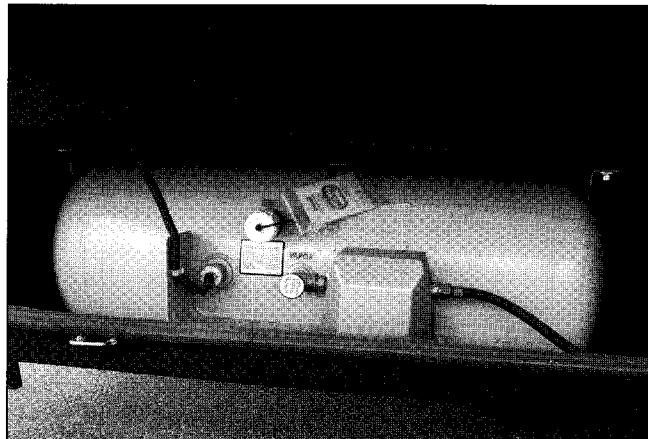

LP Gas Tank

The LP gas tank is in a compartment on the passenger side of the unit.

⚠ Caution: LP gas is flammable and potentially explosive. Use proper handling, lighting and ventilating procedures. As a gas, Liquid Petroleum is heavier than air and will dissipate if ventilation is provided to permit a downward flow.

⚡ WARNING: LP GAS REGULATORS MUST ALWAYS BE INSTALLED WITH THE DIAPHRAGM VENT FACING DOWNWARD. REGULATORS HAVE BEEN EQUIPPED WITH A PROTECTIVE COVER. MAKE SURE THAT THE REGULATOR VENT FACES DOWNWARD AND THAT THE COVER IS KEPT IN PLACE TO MINIMIZE VENT BLOCKAGE, WHICH COULD RESULT IN EXCESSIVE GAS PRESSURE CAUSING FIRE OR EXPLOSION.



NOTES:

The frame mounted tank has four controls; gas pressure regulator, vapor withdrawal (service) valve, fill valve and gauge. To provide LP gas to appliances, first open the vapor withdrawal service valve all the way (counterclockwise) then close it 2/3 of a turn. When all LP gas systems are not in use, close the valve all the way.



Caution: Do not use pliers or a wrench to tighten valves. If a valve is not leak-tight when closed by hand, see your LP gas service representative. Extinguish all pilots and open flames, stop engine and stop the auxiliary power generator, if installed, before filling LP gas tanks or fueling your vehicle tanks. Pilots and open flames should be extinguished when the vehicle is under way and, by regulation, must be extinguished in certain areas such as tunnels or restricted areas. Check ahead to areas where you plan to travel to determine any special regulations which may apply.

Filling the LP Gas Tank

A WARNING LABEL HAS BEEN LOCATED NEAR THE LP GAS CONTAINER. THIS LABEL READS IN PART:



WARNING: "DO NOT FILL CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY" OVERFILLING THE LP GAS CONTAINER CAN RESULT IN UNCONTROLLED GAS FLOW WHICH CAN CAUSE FIRE OR EXPLOSION. A PROPERLY FILLED CONTAINER WILL CONTAIN APPROXIMATELY 80 PERCENT OF ITS VOLUME AS LIQUID LP GAS.

Drive the vehicle to an LP gas supplier or one of the service stations which sells LP gas to have the tank filled. Look under Gas, Liquefied Petroleum, Bottled and Bulk in your classified directory or refer to the service directory available at your dealer. For additional information, refer to instructions for your gas appliances provided in your Owner's Information Kit.

LP Gas System Leak Checks

For your safety, check for leaks in your gas system each time the tank is filled or before each trip. Always check the system any time the odor of garlic is detected. To perform a leak check, open the valve and spread a sample quantity of Mr. Bubble soap solution over all connections. Escaping gas will create visible bubbles to show the location of any leak.



WARNING: NEVER CHECK FOR LEAKS WITH AN OPEN FLAME. IF THE LEAK CANNOT BE LOCATED, TAKE THE UNIT TO AN LP GAS SERVICE REPRESENTATIVE.

Keep the tank valve closed and turn OFF all appliances if the unit is not being used.

Using your LP Gas System at Low Temperatures

Your gas system will function well at low temperatures provided the components are kept at a temperature above the boiling point of the gas.

The following are suggestions to keep gas appliances working smoothly:

1. Choose a type of LP gas which has a boiling point lower than any temperature you expect to encounter. Ask your LP gas supplier or your motorhome dealer for information on products available in your area.
2. If outside temperatures get below the boiling point of the LP gas in your system, keep exposed area (such as the tank, regulator and lines) at a higher temperature with a protective cover.



3. Keep the system free from water vapor which may turn to ice in lines and regulators. Commercial additives such as dry methylalcohol, added to the LP gas tank, can help avoid water condensation in the regulator and the lines. Ask your LP gas supplier or your Georgie Boy dealer.

If, despite precautions, the gas flow to your appliance should fail at low temperatures, the stoppage may be due to ice in the LP gas regulator as a result of condensed moisture. Try melting the ice by warming the regulator, using a small light bulb on an extension cord. DO NOT USE AN OPEN FLAME. Once flow is restored, it may be necessary to protect the regulator or continue to provide a little heat in order to keep the moisture from freezing again. If the problem persists, ask your LP gas supplier to service the tank or regulator by removing the moisture or adding an ice inhibitor as required.

LP Gas Leak Detector


All units will have an electronic LP gas leak detector. You should consult the operating instructions provided with your Owners Packet for information.

LP Gas Appliances

Your range top and oven, furnace and water heater operate on LP gas, while your refrigerator can operate on either LP gas or electricity. Warranty certificate registration cards, service instructions and the information are included in the Owner's Informal Kit provided with the motor home. All informal relating to your appliances should be kept readily available for easy reference.

Note: Be sure to fill out and mail the warranty registration cards on all appliances as soon as possible.


It is important to carefully follow all operating and lighting instructions provided on or near each appliance (or in your Owner's Information Kit.) For the initial lighting of an LP gas appliance, it may be necessary to purge the LP gas supply line of air before the appliance will light. To purge a line, open a burner or a pilot valve and hold a flame near the burner. Allow time for air to escape. The time will vary depending on the distance the appliance is located from the LP gas tank. After several seconds, the gas should ignite and burn steadily.

 **WARNING:** ALL PILOT LIGHTS, APPLIANCES AND THEIR IGNITORS (SEE OPERATING INSTRUCTIONS) SHALL BE TURNED OFF DURING REFUELING OF MOTOR FUEL TANKS AND/OR LP-GAS CONTAINERS.

 **WARNING:** THE FOLLOWING LABEL HAS BE PLACED IN THE VEHICLE NEAR THE RANGE AREA:

IF YOU SMELL GAS:

1. Extinguish all open flames, pilot lights and smoking materials.
2. Do not touch electrical switches.
3. Shut off the gas supply at the tank valve(s) or gas supply connection.
4. Open doors and other ventilating openings.
5. Leave the area until the odor clears.
6. Have the gas system professionally checked & leakage source corrected before using again.

 **Range Top and Oven**
WARNING: IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING.

NOTES:



NOTES:

Unlike homes, the amount of oxygen supply is limited due to the size of the recreational vehicle, and proper ventilation when using the cooking appliance(s) will avoid dangers of asphyxiation.

The range top and oven in your motorhome are provided with a vent or range hood. Always use the fan when using the oven or range top in order to ensure adequate ventilation. When cooking for long periods of time with a large number of people in the home, it may be desirable to open a window or a roof vent slightly to further increase ventilation level.

When igniting the oven, note that the type of heat-actuated ignition control used for the main oven burner may result in a normal delay of a few seconds, after the oven control knob is turned ON, before the main oven burner ignites. Anticipate approximately five seconds delay for the burner to ignite. If it doesn't ignite within five seconds, turn the control knob OFF and check the gas supply. Refer to the appliance manual further for instructions.



Caution: Do not use open flames, such as the oven or range top, to warm the living area because gas combustion consumes the oxygen inside the home.


Forced Air Furnace

Your motor home is equipped with a forced-air ducted circulation system. The temperature can be regulated at the wall-mounted thermostat. The furnace will keep room temperatures at a comfortable level by activating fan and gas controls as temperatures inside the motorhome vary. Refer to information on lighting, operation, adjustment and service on the furnace case and in the appliance manual.

When storing the motorhome, turn the thermostat and the fan to the OFF position. Failure to shut off the fan may result in excessive drain on, and damage to, the auxiliary battery.

Water Heater

Your motor home is equipped with an LP gas fueled water heater. The heater is a storage type much like in your home. There is a thermostatic control on the heater to maintain the water temperature within a preset range.

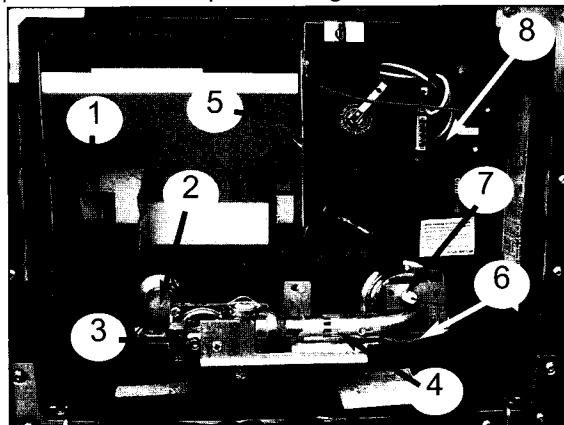

1. Burner Vent
2. Drain Valve
3. LP Gas Valve
4. Venturi Tube
5. Pop-Off Valve
6. Burner Assembly
7. Igniter
8. Electronic Ignition Module

The water heater has an electronic ignition. To ignite the heater, press the water heater switch on the component monitoring system in the kitchen.

Before igniting the water heater, make sure that it is filled with water by turning on a hot water faucet, such as the one at the galley sink. If water is supplied from the on-board fresh water tank, the pump must be ON. If water flows continuously, the heater is full of water. If water does not flow (and pressurized water is available,) leave the faucet open until the tank fills.


For complete operating instructions, refer to the manufacturer's instruction manual or see the instructions under the heater access panel.



LP Gas/Electric Refrigerator

Your refrigerator will operate on electricity or LP gas. Consult the operating instructions furnished by the manufacturer in the manual. Before operating the refrigerator, be sure the motor home is level. If it is not level, circulation of the refrigerant may be blocked by liquid accumulated in the condenser coils and cooling action could stop. Check the level of the refrigerator by placing a bubble-type leveling device (available from your dealer) on the freezer shelf. Level the motorhome with jacks and/or blocking under the wheels. (See leveling instructions.)

Note: Unlike most household refrigerators, the refrigerator will be completely silent when operating on electric power.

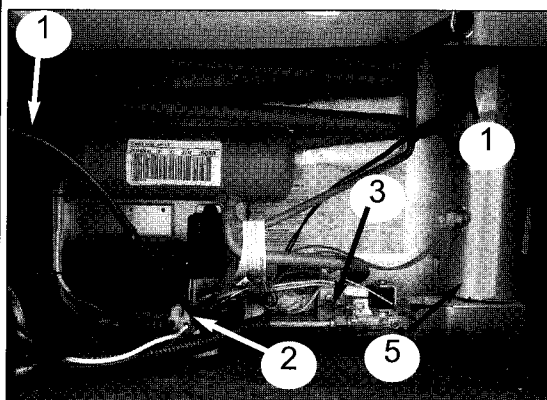

Refrigerator (With Access Vent Removed)

1. 120-Volt Electrical Power Supply
2. 12-Volt Power Supply
3. LP Gas Supply
4. Condensation Drainage Hose
5. LP Burner Tube (HOT)

Your range top and oven, furnace, water heater and some generators operate on LP gas, while your refrigerator can operate on either LP gas or electricity.

Warranty certificate registration cards, service instructions and other information are included in the Owner's Information Kit provided with the motorhome. All information relating to your appliances should be kept readily available for easy reference.

Note: Be sure to fill out and mail the warranty registration cards on all appliances as soon as possible.

PLUMBING SYSTEMS

Fresh Water

Fresh water is provided from one of two sources:

1. City water, provided under pressure when the motor home is hooked up to a park or city water supply.
2. Water stored in an on-board water tank with pressure provided by a pump operating automatically from your 12-volt electrical system.

External Water Supply

When camped in a park or near a city water supply, connect the water supply to the motor home as follows:

1. Turn water pump switch inside the motor home to OFF.
2. Remove protective cap over city water inlet pipe on your motor home.
3. Connect an approved hose to the motorhome inlet and to the city water supply line.
4. Turn city water supply valve to ON.
5. Let the water run a few minutes with your supply line attached to clean the lines.

Caution: Both the on-board pump and on-board fresh water tank are now isolated from the water pressure in the system. Do not turn pump on until pressure line is disconnected to avoid damaging the pump.

NOTES:



NOTES:

Use the following procedure to disconnect the city water supply:

1. Turn the city water supply valve to the CLOSE position.
2. Disconnect the water hose from the motorhome inlet connection and replace inlet pipe protection cap. Store the water hose in the space available in the holding tank compartment.

Filling Fresh Water Supply

The on-board fresh water supply in your motorhome provides fresh water automatically to all systems whenever a faucet is opened. Pressure is provide by a 12-volt DC automatic self-priming pump which functions any time power is available and the pump switch is ON.

Filling the fresh water tank is very easy and convenient. While the water hose is connected to the water inlet, turn the water tank fill valve 1/4 turn until the on-board fresh water tank is filled. Then turn the valve back to its normal position. You should determine when the water tank is full by monitoring the indicator lights on the component monitoring system.

! Caution: Do not run the pump without water in the system. Always keep the switch off when the water system is empty of water or when connected to city water. Running the pump when dry can damage it and may make the warranty inapplicable.

! Caution: Do not plug or install shut-off valves into the fresh water tank vents (overflow tubes). These vents are necessary to prevent overfilling of the water tank. Plugging the vents to prevent water loss, could cause the tank to overflow and expand. Tank expansion could cause structural damage to your motor home.

⚡ WARNING: USE ONLY POTABLE (DRINKING QUALITY) WATER IN THE TANK. TO ENSURE CLEAR, FRESH WATER, DRAIN TANK AFTER USING. FLUSH AND DRAIN BEFORE EACH USE AND SANITIZE IF SYSTEM SEEMS TO GIVE WATER AN ODD TASTE. SEE DIRECTIONS FOR SANITIZING THIS SYSTEM.

Troubleshooting the Water System

During normal use, your pump should operate automatically (if power is provided and the pump switch is ON) whenever a faucet is turned on. Should your on-board water supply fail to function when a faucet is opened, check to see that the pump switch is ON and make sure that your Fresh Water tank contains water. If the switch is ON, check the fuse. If no pressure is available, although the pump switch is ON, power is available and the pump fuse is intact, refer to the information provided by your water pump manufacturer for instructions.

If the water pump continues to operate when no water is being used, there may be a leak in the system or in a faucet. If no leak is found and the pump continues to operate, refer to the information provided by the water pump manufacturer for additional checks.

! Caution: When storing the motor home in freezing temperatures, be sure that all water system components, including the storage tank, are drained or protected by a special type of non- freezing additive if the vehicle is to be left unheated.



Winterizing the Water System

If the motor home is to be stored in temperatures below freezing, the fresh water and waste systems should both be winterized. We have installed a water blow-out feature to aid in this process

1. Turn the water drain valve located directly below the water inlet. Hold the drain valve open until water ceases to flow from the water holding tank.
2. Open hot and cold faucets inside the motor home.
3. Open the water heater drain plug located inside the water heater access door.
4. Locate the air valve attachment stored in the holding tank compartment and attach it to the water inlet.
5. Using a pressurized air hose, force air pressure into the water lines.
6. Continue applying air pressure until only air comes out of the faucets, the drain on the water heater and the drains on the water pump. Then stop applying the air.
7. Drain the toilet and flush any remaining water into the waste water holding tank.
8. Pour 1/2 cup of RV antifreeze in each drain in the kitchen sink, bathroom vanity and shower. After completing the above procedure, drain the waste water holding tanks per instructions.


Judicious Use of Fresh Water

People who are not accustomed to motor home living are frequently surprised at how much water can be used and wasted. Although your fresh water tank is large, your water supply will not last long unless you alter water consumption habits that are common in conventional houses. For example, shut off the water while you brush your teeth, use only what you need to wash and rinse dishes, and turn off the shower while lathering, then turn it back on briefly for rinsing.

Sanitizing Water Tank

It is suggested that your fresh water tank be renewed periodically using a chlorine solution followed by clear water rinses.

1. Connect a garden hose to the fresh water inlet hookup.
2. Pour one cup (8 oz.) of liquid household chlorine bleach into the garden hose and connect the other end to a household water faucet.
3. Fill balance of tank with potable water.
4. With pump ON, open each faucet long enough for water to run out, to remove all air from system and lines.
5. Allow the system (now filled with chlorine solution) to stand for at least three hours. Before performing the following step, provisions should be made to allow for drainage of all water from the fresh water tank.

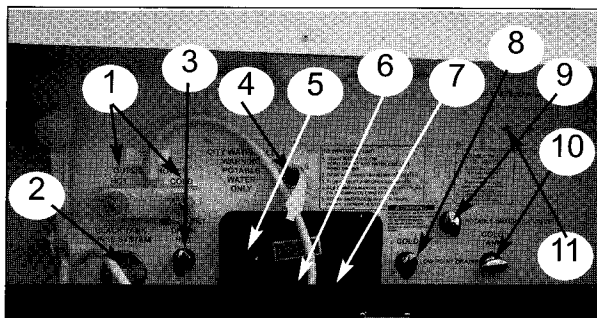

Typical Holding Tank Compartment

1. Hot & Cold Controls for Outside Shower
2. Tank Rinse Connection for Black Water Holding Tank
3. Low Point Drain - Hot Water Lines
4. City Water Inlet
5. Grey Water Drain Valve
6. Sewer Hose Connection
7. Black Water Drain Valve
8. Low Point Drain - Cold Water Lines
9. Fresh Water Fill Valve (Potable Water)
10. Low Point Drain - Fresh Water Tank

11. Cable TV & Telephone Cable Connection

6. Flush the piping by running water through faucets for at least one minute each.
7. Turn pump OFF.
8. Drain tank and pipes by opening tank drain valve. Open each faucet to permit water to drain from each pipe.

NOTES:



NOTES:

9. When the tank is empty and each faucet has been opened, drained and closed, close the drain valve.
10. Fill system with clear fresh water.
11. Repeat steps 6 through 9.
12. Partly fill the system with fresh water and check the tank and system for taste and odor. If a chlorine taste or other traces of impurity remain, go to step 13. If the system is clear go to step 14.
13. Prepare a solution of 1-quart vinegar in five gallons of water and place in tank. Fill the system completely. Agitate this solution by vehicle motion, then repeat steps 4 and 5.
14. Repeat steps 6 through 9 to empty the system.
15. If the system is to be used, fill with fresh water. If not, the system is ready for storage.

Waste Water System

Your motor home has a self-contained "double holding tank" drainage system. Waste water from the toilet flows into the "black water" tank; and depending on your floor plan, waste from the shower, vanity, and sink enters either the "gray water" or "black water" tank. Both tanks may be used while in transit.

The valves for the holding tanks are accessible in the plumbing compartment. The holding tanks are located on either side of the plumbing compartment.

These tanks can be removed, if necessary, by removing screws on the lower sides of the access panels then raising the panels on the hinges at the top.

Empty the tanks only at a proper sanitary disposal station. Drain the tanks when they are nearly full or at the end of your trip. It is not advisable to drain the tanks when they are less than 3/4 full, especially the "black water" tank because a certain amount of liquid is necessary to properly remove solid wastes.

The process of draining the waste water holding tanks is best done while wearing rubber gloves. To drain the holding tanks:

1. Make sure the drain valves on both the "black-water" tube and the "gray water" tube are pushed in to the CLOSED position.
2. Remove the plastic sewer hose from the capped storage tube. The hose has been compressed for storage but will extend as needed.
3. Remove the cap from the drain tube and securely attach the sewer hose. Make sure that the clip catch firmly to hold the sewer hose in place.
4. Insert the ground end of the sewer line into ground sewer or dump station outlet, pressing firmly far enough into the opening to be secured. In some cases, adapters may be required between the line and the inlet. Arrange sewer line between motor home outlet and dump station so that it is free from dips.
5. Drain the "black water" tank first by opening the drain valve. To open, grasp the handle firmly and pull with a quick steady motion.
6. Allow sufficient time for the tank to be completely drained. Rinse and flush tank if necessary. The push drain valve inward to close valve.

Note: Dirty tanks may cause a false reading on the Component Monitoring System.

7. Repeat this process with the "gray water" tank

Note: By draining the "black water" first, you are using the "gray water" to rinse any solid waste particles that may have been left in the sewer hose

8. Remove the sewer hose and replace the cap on the waste water line.



9. Use a hose to rinse out sewer hose.
10. Remove the sewer hose from the sanitary disposal site.
11. Compress the sewer line back into its storage tube, and replace sewer or dump station cover applicable. Please use good housekeeping when draining wastes at a campsite or disposal station. Leave the site in good order. Above all, avoid pollution of lakes and streams.

Do's and Don'ts - Waste Tanks

- DO** keep your holding tank clean using any cleaner approved for recreational vehicle sanitation & systems.
- DO** add a special deodorizer or chemical additive approved for recreational vehicle systems to sanitize and improve the tank action.
- DO** guard against freeze-up.
- DO** keep your tank knife valve closed, permitting tank to get as full as convenient before empty
- DO** keep tank knife valve and the drain cap tightly in place when traveling to permit use of the system when on the road.
- DO** use any soft (single-ply) toilet tissue.
- DO** open the bath vent to keep bathroom fresh.
- DON'T** put facial tissues, paper, alcohol type antifreeze, sanitary napkins or household toilet cleaners in your holding tank.
- DON'T** put anything solid in your holding tank which can scratch or damage the plastic.

Black Tank Rinse System


Your motor home is equipped with a system that will allow you to rinse out your black water holding tank. To rinse out your black water tank, simply connect a garden hose to the Black Tank Rinse System connection fitting located in your holding tank compartment. Next, place the end of the sewer hose into the dump station and open the Black Water Drain Valve. Turn the water hose ON and let the water tank internal sprayer rinse out the inside of the tank. Once the tank has been cleaned, disconnect the garden hose. If you will not be using the Rinse System again before freezing weather, be certain to winterize this connection as described in steps 4 and 5 of the Winterizing Procedure.

COMPONENT MONITORING SYSTEM

Many on-board systems can be monitored from one location. For your convenience, this monitoring system is mounted near the kitchen area.

From this one location, you can check:

- The status of all three holding tanks: "black waste water," "gray waste water," and fresh water
- The level of your LP gas
- The charge in your 12-volt auxiliary batteries
- Water pump
- Water heater

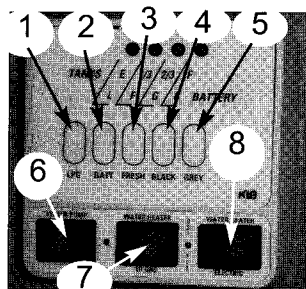

Component Monitoring Panel

1. LP gas tank level
2. Auxiliary (Coach) Battery Condition
3. Fresh Water Tank Level
4. Black Water Tank Level
5. Grey Water Tank Level
6. Water Pump Switch
7. Water Heater Switch - LP
8. Water Heater Switch - Electric

Note: On some models, a switch for the water pump is also located in the bathroom and a switch for the generator is located on the dash instrument panel.

NOTES:

**NOTES:****EQUIPMENT AND FURNISHINGS****Cockpit Pedestal Seats**

The seat can be moved forward or back by using the levers provided. Arm rests can be set in either the up or down position. Be certain that the seat controls are firmly latched and secure prior to driving the vehicle and never adjust the seat position while in motion.

Dinette Bed

A combination dinette and bed may be provided on some models. This dinette combination may be converted into a bed as follows:

1. Fold the table leg by releasing the catch, relocate the table leg by lifting the end to release from the support brackets. Let the table, with the leg folded, drop down into position.
2. Arrange cushions to make a bed.

Storage

Storage facilities on your motor home have been especially designed to remain secure while the vehicle is in motion. Most exterior compartments have key- operated locks. Drawers rest in small notches or detents when closed; to open, lift slightly to clear the detent, then pull open normally. For best results, follow a few simple rules when storing articles in the motor home.

1. Always keep tools and equipment stored in areas where they will not shift while traveling.
2. Wherever possible, place heavy articles in storage compartments which are low and between the axles for better weight distribution.
3. Use a "packaging" technique of the articles in a compartment to prevent shifting. If necessary, secure articles with straps to prevent movement.
4. Be sure that containers holding liquids are capped and cannot tip or spill. When glass containers (or dishes) are transported, secure them well to protect against accidental breakage.



WARNING: ON SOME MODELS, STORAGE COMPARTMENTS UNDER THE SOFA BED, UNDER THE MASTER BED AND IN SOME CLOSETS ALSO CONTAIN FURNACE UNITS. DO NOT STORE ANYTHING IN THE AREA OF THE FURNACE THAT WILL BLOCK OR RESTRICT RETURN AIR FLOW. ALSO, DO NOT STORE ANY COMBUSTIBLES IN THIS FURNACE AREA.

CARE AND MAINTENANCE**Interior Cleaning Wall Paneling**

The paneling of your motorhome may be on several finishes and textures. Never use strong detergents or abrasive cleaners on walls or ceilings. Most surfaces will clean with a soft cloth which has been dampened with mild liquid detergent in warm water, avoid the use of large amounts of water. Many panel suppliers suggest that one of the aerosol products designed for cleaning and preserving wood surfaces may be excellent for walls if used in accordance with manufacturer's instructions.

Draperies, Cushions, Bedspreads a Upholstery Fabrics

Due to the various fabric yarns, print inks and dyes, fire resistant finish where required, and various other treatments applied to the fabrics used to make above items, we recommend professional dry cleaning only. Professional cleaning will preserve finishes and appearance of these products. Vinyl fabrics may be cleaned using a mild detergent and a damp sponge or cloth.



Fixtures

Sinks, baths, showers or other plastic fixtures should be cleaned only with warm water and mild detergent or special cleaners. The plastics manufacturer recommends Ajax Spray Cleaner with ammonia, Joy dishwashing liquid and water or a mixture of 25% bleach and 75% water.

Do not use harsh abrasives. They may scratch discolor the surface, causing it to have to be replaced.

Windows

Moving parts of windows and latches should be kept adjusted and maintained. It is advisable to lubricate the windows with a light oil or powdered graphite at least once a year. The screws holding the windows in place should be checked and tightened periodically and the weather sealant checked for voids. Screens may be cleaned by gently wiping with a damp cloth or soft flat brush designed for the purpose.

Locksets and Latches

Annual lubrication of locksets and latches is recommended to ensure trouble-free operation. If your motorhome is located at the beach or is exposed to salt air, more frequent lubrication may be needed. One of the lubricants recommended by many locksmiths is powdered graphite, available in a handy tube most hardware or supply stores.

A record should be kept of the identification number of keys, with the make of lockset in your home. With this information alone it will be possible to obtain duplicates for any key that might be lost.

Carpeting

Use any approved cleaning product or procedure which is recommended for cleaning indoor-type carpets.

Plumbing

The water supply plumbing should require little, if any, maintenance. Refer to information provided by the water pump manufacturer for any special maintenance recommendations on the pump mechanism. Refer to the recommendations from the toilet or tank manufacturer relating to maintenance or to chemical additives which may be appropriate for those components. Plumbing system drains and traps should be kept clean. Chemical products recommended for plastic pipe may be used in the drain lines. Precautions must be taken when using a mechanical device to remove obstructions from a drain line, to avoid damage to fittings and seals. Build-up of waste on level sensors or walls of the holding tanks could result in false readings on the Component Monitoring System. Special cleaning may be required.

Condensation and Ventilation

It is important that moisture-laden air not be allowed to build up inside your motorhome. Moisture build up is often evident from the forming of a water film on windows and other cooled surfaces. Particular precautions may be appropriate in kitchen or bath areas where normal washing or cooking activities can release water vapor or steam into the air. The following steps are recommended:

1. Keep air circulating by providing ample fresh air through adequate ventilation.
2. When using shower, keep the bath vent open. Keep bathroom door closed for 20 or 30 minutes after use to permit moisture to escape through the vent.
3. Avoid hanging wet clothing to dry inside the motorhome. If it cannot be avoided, use the ventilated bath with the door closed.

NOTES:



NOTES:



WARNING: MANY PRODUCTS IN THIS VEHICLE CONTAIN FORMALDEHYDE. IT IS A SUBSTANCE WHICH MAY BE AN IRRITANT TO SOME PEOPLE, UNDER SOME CIRCUMSTANCES. YOU MAY EXPERIENCE A GREATER CONCENTRATION DURING HIGH HUMIDITY AND TEMPERATURES, BUT YOU WILL NOTICE THAT THE FORMALDEHYDE EMISSIONS QUICKLY DECREASE. IF YOU ARE AFFECTED, VENTILATE THE MOTOR HOME AND LEAVE IT UNTIL THE FORMALDEHYDE DISSIPATES. PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT WITH ANY QUESTIONS.

EXTERIOR CARE

Exterior Glass and Trim

The exterior finish on your motorhome is as easy to care for as the finish on your car. To keep it clean, simply hose it down with water, wiping the wet surface with a cloth or sponge if necessary. Do not use harsh abrasives or strong solvents on exterior surfaces. Accumulated dirt or road film resulting from storage or from heavy travel should loosen easily with warm water and a mild detergent. Rinse with plain water. Application of a good quality automotive wax will protect the finish and add luster to the color.



Caution: Be careful when washing your motorhome that you do not aim water directly into the furnace vent, water heater vent or dryer vent. Rusting and improper operation could occur if water is forced past the protection rain baffles.

Maintenance of Fiberglass Components

The front and rear caps and other fiberglass components of your Georgie Boy® motorhome are constructed of fiberglass for its light weight, design flexibility, corrosion resistance and strength. Exposure to sunlight, water, dust and chemicals can be detrimental to the gel coat surface, causing chalking, discoloration, yellowing or loss of gloss. Simple periodic maintenance procedures will minimize these changes.

It is the responsibility of the owner to make sure proper maintenance is performed.

1. Wash frequently with mild detergent. Do not use automatic dishwasher detergent, abrasives, bleaches, strong chemicals with acids/bases or ammonia.
2. Wax at least twice a year or more in high sunlight areas. Use a wax recommended for fiberglass finishes and follow the manufacturer's application procedures.
3. Never wax in direct sunlight.
4. Do not store in direct sunlight. Stubborn spots, minor scratches or nicks may be removed with a fine grit rubbing compound followed by waxing. Deep marks or gouges should be professionally repaired.

Roof

The adhesives and sealants used to construct your roof have been chosen especially to remain water proof under the sustained effects of weather and vibration. Wash dirt and grime from the roof when washing the motorhome to help minimize deterioration of the roof materials. Periodically, inspect the roof with careful attention to possible scrapes or cuts caused by overhanging obstructions. Repair any damaged spots with appropriate repair materials from your dealer. Do not use trailer roof coatings. The rubber roof can become dirty with everyday exposure to the elements; however, it can be kept clean with periodic cleanings. We recommend washing the roof at least four (4) times per year using a mild household detergent. If the roof is in an area where it collects dirt and other pollutants, we recommend using Spic-N-Span and medium bristle brush to clean the membrane. If the membrane has exhibited some mild "chalking", following the Spic-N-Span, we suggest using concentrated cleaners such as ZEP Formula 50, Protect All Wash or general purpose windshield washer fluid (no petroleum or citric based cleaners) as a secondary cleaning to remove any surface "dust" that may remain.



Please note that in some climates or areas with unpleasant atmospheric conditions, the roof may require this type of cleaning more often.

While using Armor-All or a similar product may seal the roof for awhile, as this protectant weathers away problems may reoccur if cleaning is not continued. Concerning stubborn stains (like fruit or tree sap) small amounts of Mineral Spirits on a rag, or undiluted laundry bleach, will reduce but not likely eliminate the stain. Often overlooked is the weathering of the roof seal. The roof seal will certainly weather quicker than the roof, especially in hot climates. As the seal weathers, it may experience surface degradation and chalking. Many times the lap seal can be the cause of some white residue on the vehicle, rather than the roof it-self.

While the lap seal can be cleaned with those products listed earlier, the best method to clean the seal and remove any weathered surface is to use Mineral Spirits on a rag and wipe all seal surfaces. If the problem repeats in 2-4 weeks, it may be necessary for a light covering of new sealant to be applied over the old seal. The old seal must be cleaned with Mineral Spirits first to clean and reactivate the surface, enabling the new sealant to adhere to the old. Please note that skylights (not vents) require resealing with Surebond SB-140 or Sikaflex 221.

Sealant Check of all Seams and Moldings'

Checking of all seams and moldings for deterioration, shrinkage and cracking of the protective sealers should be performed at least once every six months. Resealing should be done as soon as any of the conditions are noticed to prevent damage from water leakage. When resealing, use only quality sealers compatible with the ones originally used on your motorhome. Make sure all surfaces to be resealed are clean and all old sealant has been removed. Contact your dealer or Georgie Boy if you questions. Sealants that must be used on the rubber roof are as follows: Dicor self-leveling lap seal areas except for skylight. Around the skylight you must use Surebond SB-140 or Sikaflex 221.

Note: Prolonged exposure to heat, humidity and sunlight may increase deterioration of sealants.

Repairs

Your dealer should be able to perform most repairs or service required for your motorhome. Repair or service for warranted appliances in your motorhome will normally be handled through the appliance manufacturer in accordance with warranty instructions provided in the owner's kit. Your dealer will be glad to assist if you have difficulty obtaining service through your appliance service representative.

Refer to your Chassis Operator's Manual and to other information provided by the chassis manufacturer for chassis service instructions.

Repair of glass, fiberglass, aluminum or some plastic components can often be accomplished by camper/trailer service firms or by automobile body shops. Check with your dealer or look in the classified section of your telephone directory or newspaper. It is recommended that all chassis body bolts be checked once a year for tightness to prevent rattles due to vibration.

EXTENDED STORAGE

If your motor home will not be used for a period of several weeks, you should perform certain procedures to maintain its performance capability over that period of time.

Water System

Refer to the water blow-out procedure.

Kitchen Appliances

Refer to the manuals provided by the manufacturers of these appliances.

NOTES:



NOTES:

Furnace Fan and Thermostat

Make sure that the switches for both the furnace fan and thermostat are in the OFF position.

Electric Step

Shut off the switch by the passenger entrance door.

Plumbing Compartment Light

Turn off the light in the plumbing compartment.

Battery Disconnect Panel

An auxiliary battery disconnect panel is located near the passenger entrance door.

By pressing the switch on this panel, you are able to disconnect the auxiliary batteries from the 12-volt electrical circuits. This operates in the same manner as if you physically disconnected the cables from the batteries, but it is much more convenient if you disconnect the electrical circuits with the battery disconnect panel. It is not necessary to shut off individual electric components.

EMERGENCIES

Smoke Detector

Your motorhome has a smoke detector mounted on the ceiling near the kitchen. Test it at least once a year, or before beginning each trip. To test the smoke detector, press the button in the middle of detector. It should emit a loud piercing sound, the same sound you will hear in case of emergency. If it does not make that sound, replace the batteries.



Fire Extinguisher

The fire extinguisher is mounted in a bracket just inside the passenger entrance door. This is a convenient location for use both inside and outside the motorhome. Before using your motorhome, familiarize yourself with the proper operation of the fire extinguisher. Basic instructions are found on the fire extinguisher label. More detailed information is in a booklet as part of your Owner's Information Packet.

Note: Read this information and learn how to operate the fire extinguisher now. In an emergency, it is too late to read the instructions.



Carbon Monoxide ("CO") Detector

WARNING: CARBON MONOXIDE CANNOT BE SEEN OR SMELLED AND CAN KILL YOU. IF ALARM SOUNDS: TURN OFF APPLIANCES, VEHICLES OR OTHER SOURCES OF COMBUSTION AT ONCE (FURNACE, WATER HEATER, RV, AUTOMOBILE, ETC.) AND CALL THE FIRE DEPARTMENT. GET FRESH AIR INTO PREMISES OR VEHICLE. HAVE THE PROBLEM CORRECTED BEFORE RESTARTING APPLIANCES OR VEHICLE.

Operating Your Detector

See the instruction sheet which came with your detector for complete information. Operating your CO Detector is easy. Once power is supplied, the detector will run through a warm-up and self-check cycle for ten minutes before beginning to monitor for CO gas. There are no switches to allow the unit to be accidentally turned off, so the detector will provide reliable protection (providing that the test procedure performed) by alerting you to the buildup of potentially dangerous levels of CO gas on a continuous basis.

Escape Routes

Every passenger location in a motorhome can be evacuated through at least two emergency exits. In case one route is blocked, you have an alternate route.




On the Pursuit® & Landau® motorhome the emergency exits are the driver entrance door, the passenger entrance door and a window in the bedroom.

Note: Some windows slide and others push out at the bottom. Know how your windows open.

Note: Locate the emergency exit windows in your motorhome.

The emergency window(s) are marked with an EXIT sticker and bright red latches. To use this escape exit: follow the following instructions:

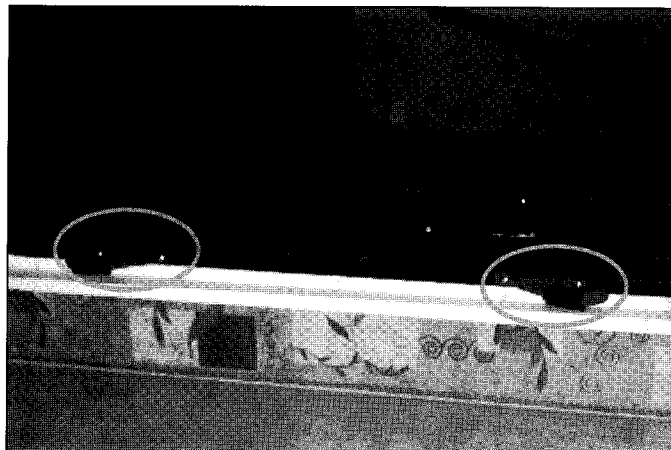

Red Latches

1. Unlock the latches.
2. Open the window.
3. Crawl through the window.
4. Call for help.

Ground Fault Interrupters

Certain 120-volt circuits are wired with ground fault interrupters (GFI) to prevent electrical shock. The receptacles protected by a GFI are the outdoor patio receptacle, all receptacles in the bathroom and the kitchen area and some receptacles on the passenger side of the motorhome.

If you should experience an interruption of electrical power in any of these receptacles, push the reset button on the receptacle in the bathroom. If the interruption in power occurs again immediately, there is a short somewhere in the circuit and you will need to find and fix it before using the circuit again.

SERVICE

Optimum Service Satisfaction

You can contribute greatly to your level of satisfaction with dealer repairs by following a few simple service guidelines:

1. Make a list of the items that need to be repaired. Often these are minor, incidental things that you may discover in the normal, day-to-day operation of your motorhome. Make your lists as you notice these items. Include any emergency work that may have been done by an unauthorized motorhome mechanic since your previous service appointment.
2. Allow sufficient service time. Each item on your list will take a certain amount of time to repair satisfactorily. Discuss the list of repair items over the phone when you call for an appointment. Your dealer's service department can give you a time estimate. Schedule the appointment well in advance of the date that you want to leave on a trip. Allow for extra time, especially if parts must be ordered. Reconfirm the repair time estimate in person with the service manager.
3. Prioritize your repair list. If you are in a hurry discuss this with the service manager and decide which repair items should be fixed first. If the entire list cannot be completed, schedule another appointment at a more convenient time.
4. Discuss warranty repair items. When you schedule the appointment, tell the service manager any warranty work must be done. Show the service manager your warranty registration papers.
5. You should stay in the dealer's customer lounge. This is for your safety, for insurance reasons and to facilitate the mechanic's work on your motorhome.

NOTES:



NOTES:

6. Inspect the mechanic's work. Even if you cannot watch the mechanic, you should exercise your right to carefully inspect the repairs once they are completed. Give it a visual inspection and go for a test drive if necessary. If you are not satisfied, talk with the service manager not the mechanic. Allow the service manager to test drive the motorhome if necessary. If time does not allow for immediate repair, make another appointment as soon as possible.

If You Are Not Satisfied

If, for some unusual reason, a problem is not handled to your satisfaction, we make the following suggestions:

1. Discuss any warranty related problems directly with the General Manager or the Owner of the dealership, give him an opportunity to help his service department resolve the matter for you.
2. Should a problem arise that cannot be resolved to your satisfaction by your local dealer, contact Georgie Boy Mfg., LLC Service Department Monday - Friday, 8:00 am - 5:00 pm Eastern time at (269-663-3415 or 1-800-521-8733).
3. The above steps are suggested because of our sincere belief that your dealer will satisfactorily handle any problem which might arise. Should you find it necessary to correspond with our factory, please send a letter describing the circumstances to:

Georgie Boy Mfg., LLC
PO. Box 1000 Middlebury, Indiana 46540

Please include model and serial number of your vehicle. Your dealer and we, the manufacturer, will continually strive to merit your confidence. Thank you for choosing our product.

REPORTING SAFETY DEFECTS

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Georgie Boy Mfg., LLC.

If NHTSA receives similar complaints, it may open an investigation and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Georgie Boy Mfg., LLC.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

